


Instruction Manual

6-in-1 floor/carpet washer vacuum cleaner

sweeps, vacuums, sprays water & washes, scrubber+ mops, dries instantly and self-cleans

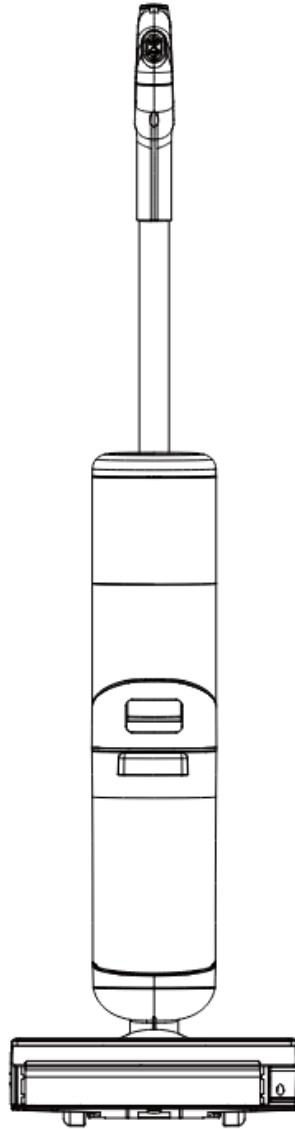

Please read all instructions carefully before operating your machine. Keep it well for future reference.

Hand over the manual together if the machine is given to others.

VC228 is designed for cleaning hard floors such as wooden floor, tile, marble, linoleum etc.


This model is for household use only. Commercial or industrial use of this unit voids the manufacturer's warranty.

Contents

- 1, overview of the appliance.. p3
- 2, important safety Instructions
- 3, Operation Instructions
 - Assembling the machine
 - Charging your machine
 - Detaching the machine
 - Using the machine, mop self cleaning
- 4, maintenance
- 5, troubleshooting guide
- 6, warranty policy
- 7, warranty card

1, Overview of the appliance VC228 with standard accessories

1. Power switch
2. High/low speed switch
3. Self cleaning switch
4. LED display screen
5. Battery box
6. Dirty water cup button
7. Dirty water cup handle
8. Float
9. Dirty water cup
10. Power brush lid button
11. Power brush lid
12. Bumper
13. Al. tube lock
14. Fresh water cup button
15. Fresh water cup handle
16. Fresh water cup
17. Big wheel
18. Charging adaptor
19. Storage&auto charging/cleaning station/self station/self
20. Power brush roll
21. cleaning brush
22. screw pack(fixing storage/charging station)
23. HEPA

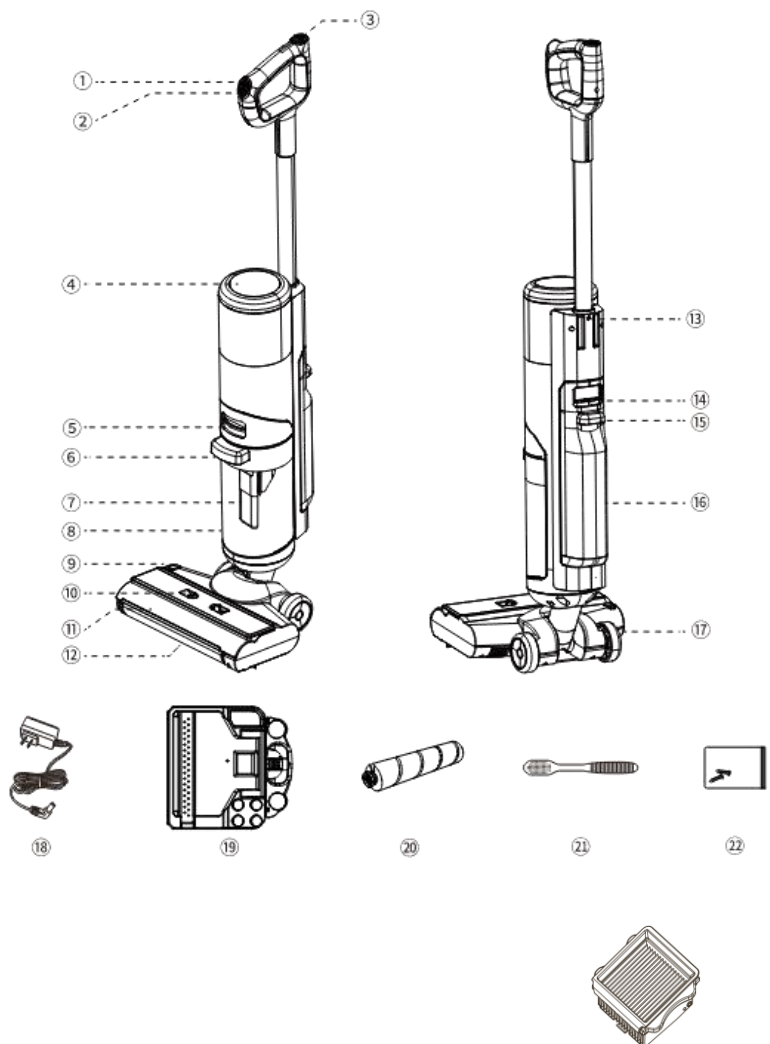

2, Important safety Instructions

WARNING – To reduce the risk of fire, electric shock, or injury:

Please read all instructions carefully before operating your machine. Keep it well for future reference. Hand over the manual together if the machine is given to others. Follow up the procedure to assemble the machine. Failure to follow the warnings and instructions may result in damaging machine, electric shock, fire and/or serious injury. This model is for household use only. Commercial or industrial use of this unit voids the manufacturer's warranty.

• This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Never touch the power supply or the appliance with wet or damp hands.
- Never use the machine if the plug/adaptor or sheath is damaged. If appliance has been dropped, damaged, left outdoors, dropped into water, or is not working as it should be, arrange for damaged power cables, adaptor and/or plugs to be replaced as soon as possible by a qualified specialist or by our Customer Services.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow. Keep hair, loose clothing, fingers, and all parts of your body away from openings and moving parts. Never point any part of the machine to eyes, ears or mouth.
- Stop using immediately if the appliance is overheating, making unusual noises, producing unusual odors, performing low suction, or leaks electricity.
- Do not use the adapter for a different product and do not attempt to charge this appliance with a different adaptor or charging station. Use only the adaptor/charging station supplied with this appliance.
- Turn cleaner OFF and disconnect from electrical outlet for long-term storage. Every 6 months the machine should be charged for one time to avoid battery slight leaking to below starting voltage.
- Always clean the Dirty Water Tank, filter, brush roll, air inlet after each use to avoid potential blockage, which may lead to low suction power, motor overheating, or reduce the service life of the appliance.

- Always store the appliance indoors. To prevent accidents, keep the appliance in a dry location when not in use. Clean with a dry or wring out towel to clean the machine, never use very wet towel !
- Do not immerse.
- Make sure to switch off all buttons before replacing with brush roll or maintaining.
- Arrange for repairs to be carried out only by specialist workshops. Under no circumstances should you open the appliance by yourself. Interference that are not carried out by a specialist workshop could lead to physical injuries.
- Before switching the machine on, ensure that the mains voltage corresponds to the voltage indicated in the technical data for the appliance.
- Under extreme conditions, leaks in the battery cells may occur. In the event that battery fluid comes into contact with skin or eyes, the affected area must be rinsed off with water immediately. Contact a physician.
- Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- Do not place or submerge appliance in standing water or try to clean flooded areas.
- Do not use the appliance when the water depth is more than 5mm above the surface.
- Do not use the machine without the dust filter inserted.
- All data and technical instructions of this manual are based on results from lab tests or designated third parties. The company reserves all rights for final explanations.

Range of Usage

Use only indoors, on hard floor surfaces , such as vinyl, tile, sealed wood, tile, marble, linoleum, etc. Be careful not to run over loose objects or edges of area rugs. Stalling the brush may result in premature belt failure. It may reduce the cleaning effect to use on uneven surfaces.

This appliance is not suitable for use with inflammable or explosive substances

Keep your appliance away from heat sources, such as fireplace or heater, to avoid casing deformation.

Do not expose a battery pack or appliance to fire, inflammable/explosive materials, or excessive temperature. Exposure to fire or temperature above 266°F (130°C) may cause an explosion.

Do not use to pick up flammable or combustible liquids, gasoline, ultrafine particles, sharp objects, hazardous material, chemicals or anything that is burning or smoking such as cigarettes, matches, paints, color pigments from printer, alcohol, kerosene, perfume, or hot ashes. or use in areas where they may be present.

Do not use to pick up ultrafine particles, such as lime, cement, sawdust, gypsum powder, or ashes.

Do not use to pick up hazardous material and chemicals, such as solvent, drain cleaner, strong acids, or strong alkali.

Do not use to pick up sharp or big objects, such as metallic nails, pieces of glass, metal paper clips, or pins, big spitball/cloth.

About Cleaning Solution

It's not allowed to fill a large amount of cleaning solution into the flesh water tank. When it's necessary to fill a little cleaning solution into the flesh water tank to clean the stains on the floor/carpets, should dilute according to the formula or proportion like 1(solution):50(water). In case a lot of bubbles occur should switch off the machine immediately. Bubbles enter into the motor may cause damage to the appliance.

only add diluted solution into flesh water tank . We recommend using the provided cleaning solution. Do not use the product with acidic, alkaline solution, or any substances harmful to the environment.

Keep out of reach of children. If any solution gets into the eyes, immediately flush them with clean water. If any solution is swallowed by accident, seek medical care immediately. Dirty water and solution disposal should comply with local environmental regulations

About the Appliance

Do not modify or attempt to repair the appliance except as indicated in the instructions for operating and cleaning.

Arrange for repairs to be carried out only by specialist workshops. Under no circumstances should you open the appliance by yourself. Interference that are not carried out by a specialist workshop could lead to physical injuries.

Charge the appliance with the correct adaptor. Input Voltage: AC 100-240V. Both high and low voltages can damage the adaptor, appliance, or even cause danger to the user. Correct rating label is on the adaptor.

Use extra care when cleaning on stairs.

Ensure that the Power Switch is in the OFF-position before picking up or carrying the appliance.

Do not lay flat, lean the appliance, or shake violently so as to prevent dirty water from entering into the motor.

To avoid being tripped accidentally, please put away the appliance on the charging base.

Always install the Dirty Water Tank, filter and Clean Water Tank properly before use.

Do not allow the appliance or charger to get wet to avoid risk of fire or injury caused by a short circuit

Use only as described in this manual. Use only manufacturer's recommended attachments.

Always switch off the appliance before making any adjustments, changing accessories, or storing the appliance. Such preventive safety measures reduce the risk of starting the appliance accidentally.

Always turn off this appliance before connecting or disconnecting the motorized nozzle.

The adapter may not be used for other purposes. Never carry the storage station or the adapter by the cable. Do not pull on the cable when you want to move the appliance.

- Always grip the power plug to disconnect the appliance from the power supply.

- This product contains rechargeable batteries. Do not throw the batteries into a fire and do not subject them to high temperatures. There is the risk of an explosion!


Operation Instructions

Assembling the machine


Note: Ensure that the machine is disconnected to the charger before assembling.

1. take out of the machine, main handle, spare mop, adapter, storage station, HEPA, cleaning brush, screw pack and any other optional accessories from the box. Refer to the overview.

2. Insert the al. handle into the top inlet of machine, Attention that the handle must be inserted to the correct position(al. handle lock to the hole on the main body). Pull the handle up slightly, if it can not be pulled out then it's locked well. Push the lock inside the hole, pull the handle to take it off.

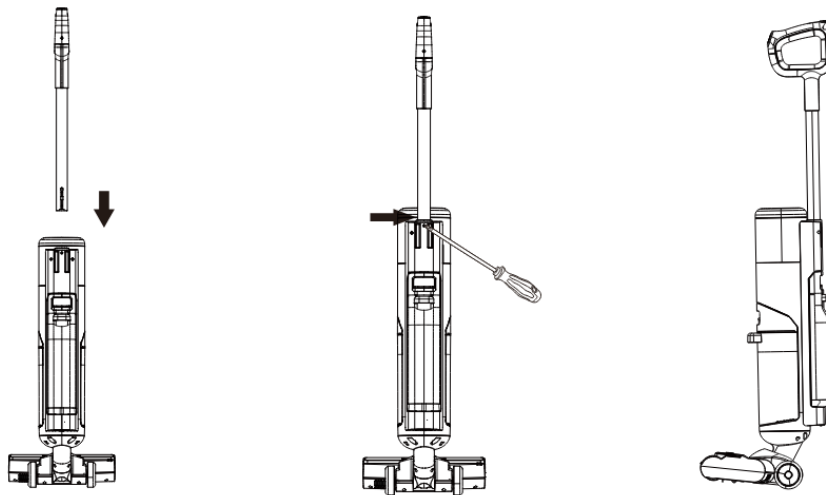

3, Fix the storage station / charging station together with 2 screws.

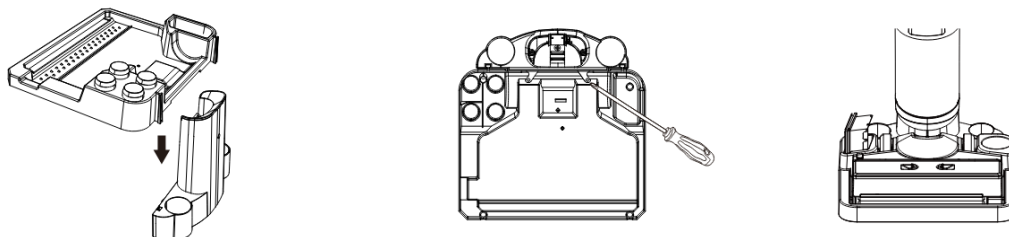


4, Add water before assembling, open the seal then add water, the seal must be closed tightly to ensure no water leaks out, the water cup surface should be dried before putting on the machine.



Charging your machine

Note: The machine and power floor brush will not work when it's being charged with charger.

1. Place the machine near an electrical power supply and plug the charger in the power supply. Must check if your local power supply is same as the rating in the charger.
2. Connect the charger to the charging socket on the charging station. The LED display screen shines to indicate that the vacuum cleaner is properly connected to the charger and that the unit is being charged. When it's fully charged, lamps stop shining and will keep on.

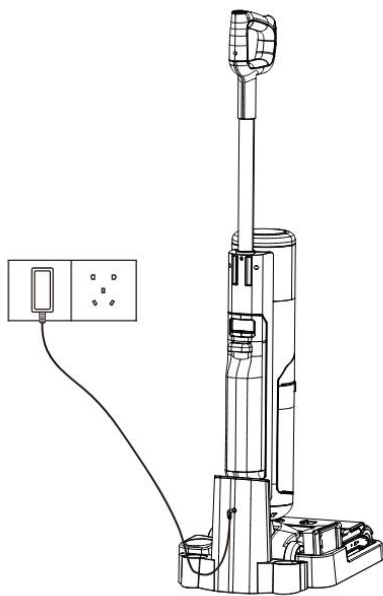


charging lamps

Detaching the machine

Note: Ensure that the unit is not connected to the charger before detaching the machine, and must make sure all switches are turned off before detaching the machine, better to take off the dirty/fresh water tanks.


1. To take off the water/fresh water tanks, just push the buttons.

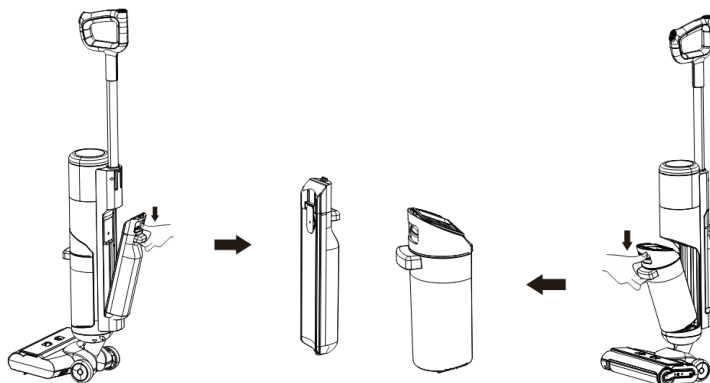

Using the machine, mop self cleaning

During operation, it's forbidden to push the machine hard on the floor, or tread on the power brush, it will damage the motor inside and trigger the protection. Hold the handle naturally to operate it.

1. The machine can be used directly after following up the instructions in the “ assembling the machine” and “ charging the machine”. Following below steps to select a working function,

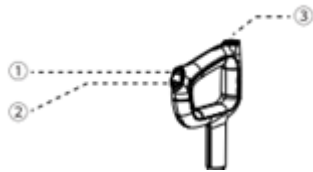

Push button 1, low speed; push button 2, high speed, push again low speed.

When the machine is in the charging station and adaptor is in charging condition, water in the flesh water cup, push button 3, auto cleaning power brush roll. If no water in the flesh water cup, This function does not work.


2, LED indicator

Power capacity indicator

Low speed

Power brush blocked

Self cleaning mop

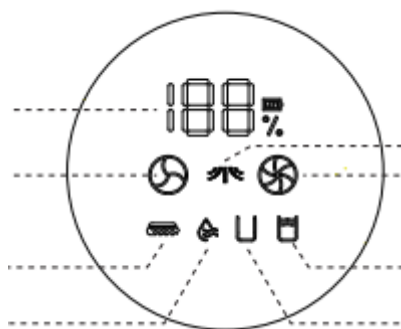

charging indicator

Spray water


high speed

dirty water cup full

fresh water cup empty

3, storage station and auto cleaning mop

You can store all accessories/machine on the storage station, push the self cleaning button to auto wash the power brush roll, when do so the adaptor must be plugged in and enough flesh water in the flesh water cup, better dirty water cup is empty.

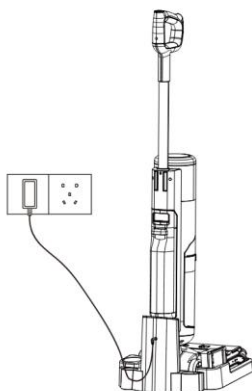

Caution: This machine will auto cut out in case the water exceeds the max water line(for BLDC motor version only).


Attention: The rolling brush side connecting rod must be placed in line with the ground brush side to install the rolling brush cover to prevent the rolling brush connecting rod from moving outward. After the cleaning work is completed, turn off the power switch and wait about 2 seconds for the machine to stop completely before moving the machine to the storage seat, which can prevent water stains on the ground area.






MAINTENANCE

After each operation, below procedures must be followed,

1, switch off all buttons, press the dirty/flesh water cup buttons to take them off.

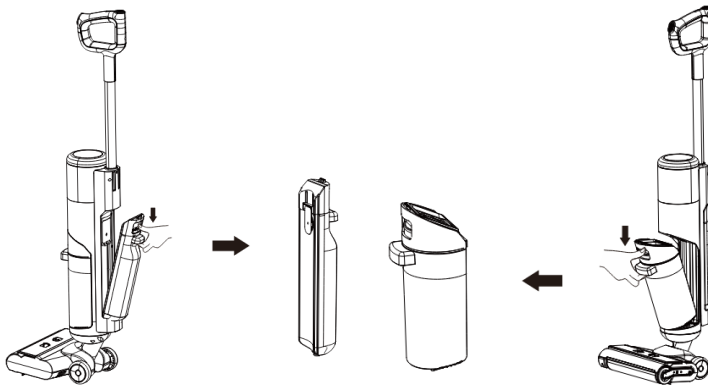

2, Empty and clean the dirty water cup & filters

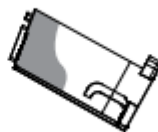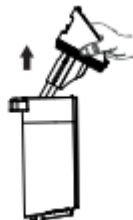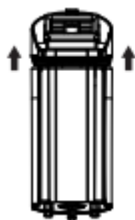

Do not pour solid debris into a sewer or drain pipe to avoid blocking, just pour in a dust bin.

Tapping or washing filter to keep it clean, or suction power may go down.

3, Do not use a washing machine to clean the dust filter assembly. Do not use a hair dryer to dry it. **Air dry only. If the filter is clogged, machine will have no suction power!**

4, after washing the parts, assemble to the machine opposite to above procedure.

5, during assembling the dirty water tank, do not lose any parts like float, filter, filter frame, tank and tank lid.etc.


6, Pay attention to the 2 side ribs of the dirty water tank, pointing to the 2 side holes in the tank lid, no gap between the tank and the lid after assembling. If not assemble in the correct position the Dirty water tank could not be put back to the machine body.

7, When putting back the dirty water tank, put the tank bottom onto the body first, then pointing the 2 sides slots of the tank to the body's guiding ribs on the 2 sides, at last one hand hold the flesh water tank back so machine does not move, another hand hold the dirty water tank to push into the body, "click" sound means it's locked.




Attention: following below procedure, the brush roll can be taken off from the body to wash separately.


8, Rolling mop gets blocked, or gets noisy. In case the mop is blocked, such as big dust, hair, plastic paper, cloth etc, the blockage must be removed before using again. Just remove the blockage away between the mop and the bottom inlet. If the blockage still exists, following below steps to take off the brush roll to remove the blockage inside the power brush, or the hair etc around the fixture.

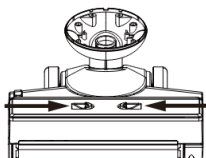

push the power
brush top lid

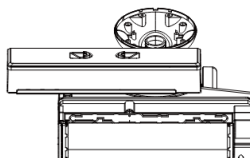

Pull brush roll out by grabbing the brush roll tab and pulling upward,
the clear the blockage


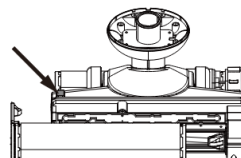


In case the suction power is still weak, check the inlet/hose after the mop, the water spray slot to remove any dust.

9. Replace brush roll

Can replace with a new brush roll in case it's worn out.

10. After operation, air dry below parts

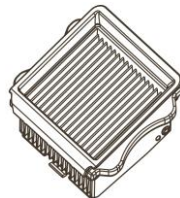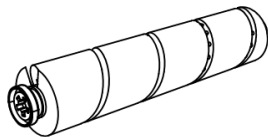

CAUTION: The suction inlet must be open and free of any obstructions at all times.

Otherwise, the motor may be overheating and could be damaged.

Note: it is recommended that the filter/dust cup should be cleaned after each operation and filters should be replaced for 6-12 months to ensure best performance of the vacuum cleaner. The power brush rolling mop should be checked from time to time to ensure no blockage or worn out.

In case of wrong operation, such as the power brush rolling mop is blocked by hair etc, or the main vacuum motor inlet is jammed, or the battery is too hot, etc, the system may be protected, use the charger to activate it. In case the problem still exists, present it to a qualified agent for repair or maintenance.


Important

Make sure that dust filter has completely air dried before putting back in the machine. In case of long time storage, 6 months longer, the machine should be charged for one time to avoid battery slight leaking to below starting voltage. Clean with a dry or wring out towel to clean the machine, never use very wet towel ! Always air dry the brush roll/filter/dust cup/fresh water cup etc t avoid smell.

WARNING!



forbidden to use
Without filters

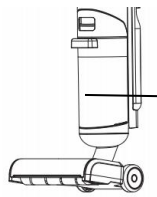

MAX

forbidden to use
over water max mark




detergent


forbidden to add
corrosive detergent



keep away
from heaters

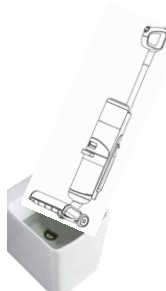

forbidden to immerse
into water or rinsed
under a tap

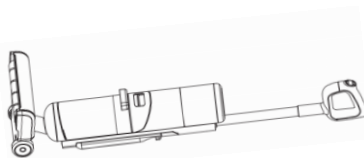

forbidden to put on ground or horizontally with water in dust cup or water cup

Specifications,

Input of the adapter 100-240V 50/60Hz, output 27V 500-1000mAh

Unit: 22.2V 2200mAh or 4000mAh(subject to models) Li battery, 200W with brushed motor;
250W with BLDC motor

WARNING:

Correct Disposal of this product	
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe.

TROUBLE SHOOTING GUIDE

PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
machine does not work	1. batteries discharged. 2. dead battery(battery won't hold charge). 3. connector between the unit and the charger is dirty. 4. no power supply to the charger. 5. charger is plugged in. 6. System is protected, lamps flash 7, main handle is loose 8, water into machine or battery etc	1. charge the machine. 2. call customer service or dispose of unit. 3. wipe and clean dirt from connector. 4. check fuse or breaker, replace fuse/reset breaker. 5. unplug the charger. 6. Remove the blockage, after the lamps off start again; or activate the system with the charger. 7, insert the main handle to the bottom position 8, dry the machine or battery, re-start
Power floor brush does not work	1. the rolling brush is blocked with debris or string etc. 2. Software protected 3. other technical issues	1. remove debris from rolling brush. If there is string or thread wrapped cut gently with scissors. 2. Remove any blockage and restart. 3. call customer service
machine cannot pick-up dust; suction power become weak	1. dust container is full. 2. Dust filter needs cleaning or replacement. 3. unit needs recharging.	1. empty dust container 2. remove dust filter assembly and check for object(s) in suction inlet and remove. Clean or replace dust filter assembly. 3. charge unit.
Dust/water leak from machine	1. dust container is full. 2. dust filter is not installed correctly. 3. puncture/hole in dust filter	1. empty dust container 2. Review the dust filter assembly installation instructions. 3. replace dust filter assembly.
Battery can not be charged	battery has reached the end of its service life.	Call customer service
Hear strange noise when the appliance work	check whether the floor brush or dust filter is blocked by big dust; check whether dust container is full.	stop to use the appliance right now; clean the dust filter assembly and floor brush, empty the dust container. If the problem cannot disappear, pls call customer service

Warranty

This machine is designed for about 300h or 800h (depending on the specific models) except the consumable parts like mop/battery/filters/scrubber/brush roll etc. It's warranted for 1 year for manufacturing quality problems. Any mis-use, falling/drop down, no-reason return, not following up the instructions in the manual etc are not in the warranty policy.

- Only applies to purchases made from authorized retailers.
- Is subject to the adherence of the requirements outlined in this instruction manual, and is subject to further conditions outlined below.

WHAT IS COVERED?

- Your appliance has a year warranty against original defects in material and workmanship, when used for private household purposes in accordance with the Instruction Manual.
- This warranty provides, at no extra cost to you, all labor and parts necessary to ensure your appliance is in proper operating condition during the warranty period.
- This warranty will only be valid if the appliance is used in the country in which it was sold.

WHAT IS NOT COVERED?

The retailer shall not be liable for costs, damages or repairs incurred as a result of:

- Appliances purchased from an unauthorized dealer.
- Careless operation or handling, misuse, abuse and/or lack of maintenance or use not in accordance with the Instruction Manual.
- Use of the appliance other than for normal domestic purposes, e.g. for commercial or rental purposes.
- Use of parts not in accordance with the Instruction Manual.
- Use of parts and accessories other than those produced or recommended by the maker.
- External factors unrelated to product quality and use, such as weather, modifications, accidents, electrical outages, power surges or acts of God.
- Repairs or alterations carried out by unauthorized parties or agents.
- Failing to clear blockage and other hazardous material from the appliance.
- Normal wear and tear, including normal wearing parts, such as clear bin, belt, filter, HEPA, brush bar, and power cord (or where external damage or abuse is diagnosed), carpet or floor damage due to use not in accordance with manufacturer's instructions or failure to turn the brush bar off when necessary.
- Reduction in battery discharge time due to battery age or use

WARRANTY CARD

Name:	Model no.
Phone:	serial no.
Address:	invoice no.
Purchasing date:	order no.
Retailer:	

Received date	Problem description	repairing parts	Repairing finished date	serviceman