

Instruction Manual

Upright vacuum cleaner



Model: VC256

Please read the manual carefully before operating your vacuum cleaner. We'll keep it for future reference.

This machine is only for picking up dry dust, it's strictly forbidden to pick up any liquid.

Unpack the machine



Overview of the appliance



Cord storage hook



install the handle & handle lid with the 2 screws

Important safety Instructions

To avoid potentially fatal electric shocks:

- Do not use the appliance outdoors.
- Never use the vacuum cleaner if the cable, plug or casing/dust bag are damaged.
- To avoid risks, arrange for damaged power cables and/or plugs to be replaced as soon as possible by a qualified specialist or by our Customer Services.
- Arrange for repairs to be carried out only by specialist workshops. Under no circumstances should you open the appliance yourself. Interference that are not carried out by a specialist workshop could lead to physical injuries.
- Before switching the vacuum cleaner on, ensure that the mains voltage corresponds to the voltage indicated in the technical data for the appliance.
- Never touch the power supply or the appliance with wet or damp hands.

To avoid the risk of injury:

- Do not change any accessories while the appliance is switched on.
- Do not use the vacuum cleaner for vacuuming up sharp objects or glass shards.
- Never vacuum up burning matches, glowing ashes or cigarette butts.
- Do not use the vacuum cleaner for vacuuming up chemical products, stone dust, gypsum, cement or similar particles.
- Do not use the vacuum for vacuuming up liquid, water or similar particles.
- This appliance is not suitable for use with inflammable and explosive substances or chemical and aggressive liquids.
- Always store the appliance indoors. To prevent accidents, keep the appliance in a dry location when not in use.
- **This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.**

Tips for safety:

- Use only accessory parts recommended by the manufacturer.
- Do not pull on the cable when you want to move the appliance.
- Always grip the power plug to disconnect the appliance from the power supply.
- Always be sure to keep the vacuum away from heating elements, ovens or other heated appliances and surfaces.
- Always make certain that the ventilation slits are open. A blocked ventilation circuit can result in overheating and damage to the appliance.
- Take special care when using the vacuum on stairs.
- Do not use the vacuum without the dust filter inserted.

Operation Instructions

Note: Before switching the vacuum cleaner on, ensure that the mains voltage corresponds to the voltage indicated in the technical data for the appliance.

1. Rotate the lower cord storage hook, remove the power cord, and insert it into a socket.
2. Step on the latch pedal and tilt the machine to the operating angle.



3. Push the switch and select the suction power level I or II. After the machine starts for 4S, start using the machine for cleaning. Note: The machine will be stopped in case the brush is not completely started or brush is entangled, e.g. by cloth, carpet, hair etc. Remove these entangled materials to restart the machine.
4. Do not block the air cooling vents during use.
5. After use, rotate the lower cord storage hook downward, then wind the cord onto the upper and lower hooks.

Replace the dust bag


Unzip the bag



pull the dust bag frame upward
Then take out the dust bag




replace with a new dust bag
and push down to lock reliably

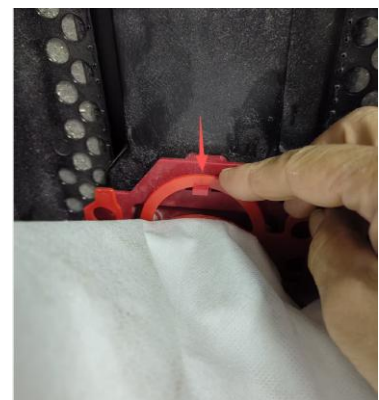

NEVER operate the vacuum cleaner without dust bag in place.

Replacing the belt


In case the belt is broken, follow below steps to replace with a new belt. Only use original belt!

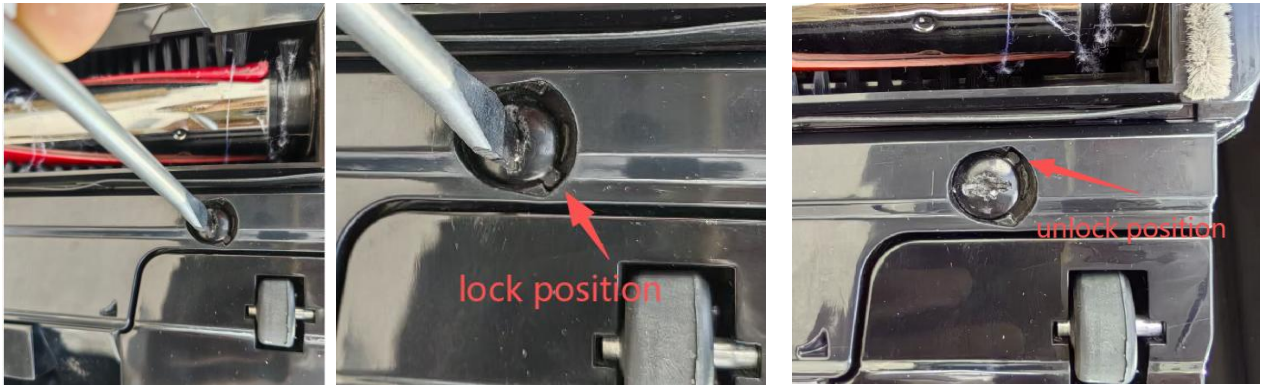

Rotate the lock button from the bottom plate lock position to unlock position



Take off the bottom plate

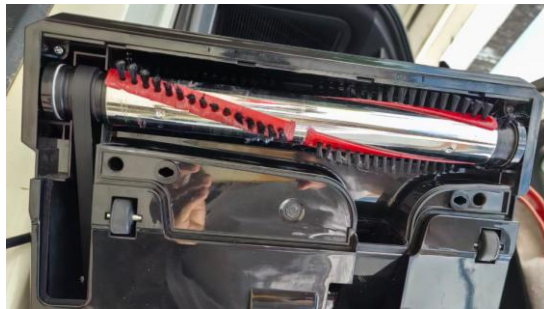

take out the brush roll and belt and replace with a new one

Attention: only original kevlar belt can be used, and belt should be aligned to the poly-v teeth of The motor and brush roll.

TROUBLE SHOOTING GUIDE		
PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
vacuum cleaner does not work	1. check main power supply and voltage 2. switch on I or II. 3. no power. 4, machine under protection.	1. check right main power supply and voltage. 2. switch on. 3. check power supply. 4. check brush roll, no blocking, And machine should start up.
Power floor brush does not work	1. the rolling brush is blocked with debris or string etc. 2. the belt is broken.	1. remove debris from rolling brush. If there is string or thread wrapped cut gently with scissors. 2. replace with a new belt.
vacuum cleaner cannot pick-up dust; suction power become weak	dust bag is full.	Clean or replace a new dust bag.

WARNING:

Correct Disposal of this product	
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe.