

INSTRUCTION MANUAL

VACUUM CLEANER



This appliance is for household use only

Suzhou iElectrica Appliance Co., Ltd.
Address: No. 35, Changan Road, Xukou Town,
Wuzhong District, Suzhou, China

Safety instructions

Read all the safety instructions before you use your vacuum cleaner

Power source

- You should only plug your vacuum cleaner into a 220-240V AC 50/60Hz supply

Using your vacuum

- For safety reasons you should not vacuum wet surfaces, pick up wet objects or use in wet conditions.
- Do not use the vacuum cleaner to pick-up burning objects as this is a fire risk!
- Do not pick up hot objects such as coal and ashes, or sharp objects, or flour , cement similar objects.
- Do not use the vacuum cleaner to pick-up large objects that are likely to cause damage.
- Do not run over the mains cable with your vacuum cleaner. Do not use with damaged cord.
- Use only for domestic use. Industrial or commercial use invalidates the warranty.
- Most new carpets have breaking in period in which only light vacuuming is recommended.
- Do not let children use the vacuum. Keep hair, loose clothing, fingers, feet and body parts away from openings or moving parts.
- Do not use without filters in place.

Transporting your vacuum

- To move your vacuum cleaner from room to room, unplug the unit and carry using the carry handle.
- Never pull the vacuum cleaner by its cord or the flexible hose when moving

Servicing and maintenance


- Ensure you replace the filters when necessary.
 - Always empty the dust cup when indicated on the vacuum cleaner.
 - The plug of the power cord must be removed from the wall socket before cleaning the appliance or undertaking any maintenance operations.
 - If the power cord becomes damaged, do not use the vacuum cleaner, it must be replaced by an authorized service agent.
- This appliance is not intended for use by persons(including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.**
- Children should be supervised to ensure that they do not play with the appliance.**

Specification

Model Number: VC1501 series (fixed speed control, speed control on body, infra red remote control, please check your model no.

Features: floor brush
2-in-1 brush
extension tube
suction control on the hose handle

Parts identification

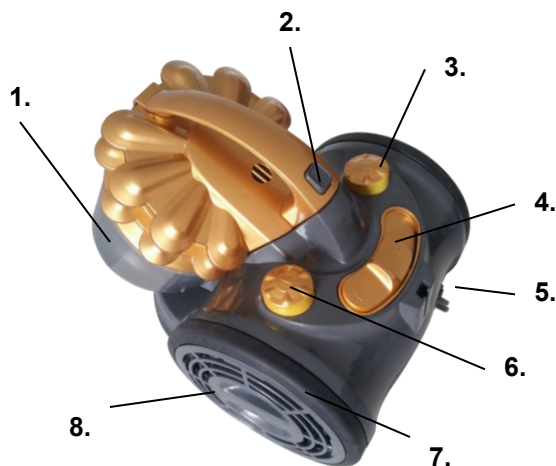

9.



10.



11 °



12 °

- | | |
|--|-------------------|
| 1. Dust canister | 6. Switch button |
| 2. Dust canister button | 7. Big wheel |
| 3. Cord rewinder button | 8. Filter grille |
| 4. Speed control on knob(or fixed speed lid or remote control indicator) | 9. Extension tube |
| 5. cord | 10. Hose kit |
| | 11. Floor brush |
| | 12. Combi nozzle. |

Assembly

•Remove your vacuum cleaner carefully from the box. You may wish to store the packaging for future use.

 
Mains power

- Your vacuum cleaner is equipped with a cord power and plug.
- Plug your power cord into the main socket. Ensure the voltage is compatible before switching on your vacuum.
- When not in use, unplug your vacuum from the mains power.

Assembly




- Place the Hose connector into the hose inlet socket as shown above · turn clockwise to lock it;
- To release the hose connector turn counter-clockwise and pull out of the hose inlet socket.

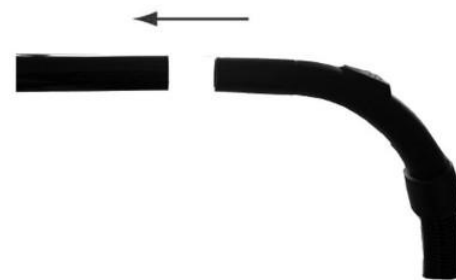

- Slide the upper handle into the extension tube (if required).



 - Slide the upper tube into the bottom tube

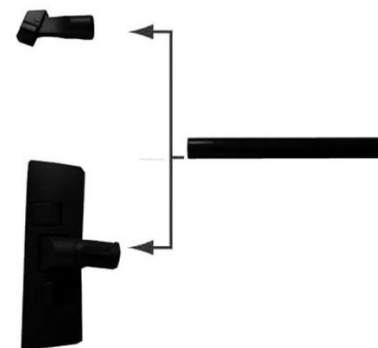

- Slide the extension tube into the required attachment.

Using the vacuum cleaner

Switch on



•Press the On/Off switch to turn the cleaner on.

Rewinding the cable



Speed control knob



Remote control indicator and handle




Fixed speed lid

Using the VC

- The floor head is generally used for daily cleaning of carpets and hard floors.
- The crevice tool can be used for slipping down the side of chairs and sofas, reaching into corners along baseboards etc.
- The upholstery tool can be used for vacuuming chairs, curtains and more delicate areas.
- Connect the required tool by pushing and twisting gently onto the end of the extension tubes.
- Pull the power cord gently to the required length, the maximum length is signified by the yellow and red marking on the power cord.
- Do not attempt to pull past the red marker.
- Ensure that your power supply is 220-240V AC 50/60Hz than plug the cord into the outlet.

Hold the cable in one hand, and press the cable rewind button with your foot, feeding the cable back slowly.

WARNING IMPORTANT:
DO NOT USE THIS CLEANER
STANDING ON EXHAUST GRILLE. THIS
WILL CAUSE OVREHEATING AND MAY
DAMAGE THE CLEANER OR FLOOR
COVERINGS.

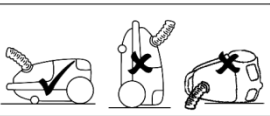

Maintenance

DUST FULL

•The dust full protector will automatically open(for models $\geq 1000W$) or the thermostat will be triggered (for models $< 1000W$) when the dust canister is full or when the tube is blocked. The dust canister should be cleaned and/or the blockage should be removed from the hose or tubes to prevent the vacuum cleaner from overheating and causing damage.

To clean the dust canister, push the top button to take off the canister



•Press the bottom release button to empty the dust in the canister.




•Close the dust canister bottom lid .

FILTER CLEANING

Filter 1

•The filter should be removed and rinsed twice a year or whenever it is visibly clogged.

- Always operate the unit with the filter installed or damage may occur to the unit.
- Open the lid as shown on the left, the filter is shown in the diagram below.

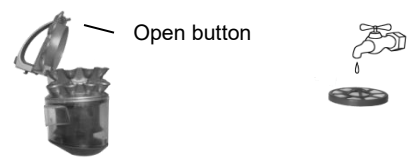

- Remove filter.
- Hand wash in cool soapy water.
- Rinse thoroughly under running water to remove all particles and soap.
- Allow to dry naturally.
- Replace filter when dry, operating with a damp filter will damage the motor and void the warranty.

Filter 2

•The second filter is located at the left wheel of the unit. To clean this filter, [lift the left wheel](#), unclip the grille clockwise as shown in the diagram and shake the filter to clear any dust which may have accumulated. Its washable in water as well.




Unclip clockwise
To clip the grille, align the indication arrow and turn counter-clockwise until a click sound

Do not machine wash the filter and do not attempt to dry using any kind of heated appliance.

Maintain canister

Store system

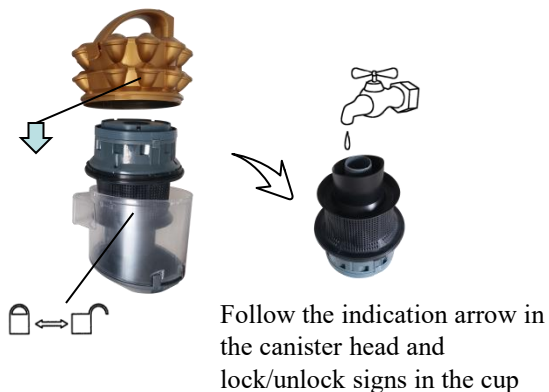

220V~240V, 50/60Hz, Class II for all models
VC1501-60 · VC1501E-60, VC1501H-60,
VC1501-80 · VC1501E-80, VC1501H-80,
VC1501-140, VC1501E-140, VC1501H-140

VC1501-60/80/140 · no speed control;
'E' electronic speed control on body ;
'H' infra-red speed control on handle



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2006/95/EC

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent material to be recovered to obtain significant saving in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

Warranty Information

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year (Germany: 2 years), starting from the date on which the appliance is sold to the end user.

The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service centre. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.

The warranty will not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- Use of force, damage caused by external influences
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliances