

# INSTRUCTION MANUAL

## VACUUM CLEANER



VC1208

**This appliance is for household use only**  
**Suzhou iElectrica Appliance Co., Ltd.**

No.699, Pingan Road, Puzhuang, Linhu Town, Wuzhong District,  
Suzhou, 215105, P.R. China

## Safety instructions

**⚠ Read all the safety instructions before you use your vacuum cleaner**

### Power source

- You should only plug your vacuum cleaner into a 220-240V AC 50/60Hz supply

### Using your vacuum

- For safety reasons you should not vacuum wet surfaces, pick up wet objects or use in wet conditions.
- Do not use the vacuum cleaner to pick-up burning objects as this is a fire risk!
- Do not pick up hot objects such as coal and ashes.
- Do not use the vacuum cleaner to pick-up large objects that are likely to cause damage.
- Do not run over the mains cable with your vacuum cleaner. Do not use with damaged cord.
- Use only for domestic use. Industrial or commercial use invalidates the warranty.
- Most new carpets have a breaking in period in which only light vacuuming is recommended.
- Do not let children use the vacuum. Keep hair, loose clothing, fingers, feet and body parts away from openings or moving parts.
- Do not use without dust bags or filters in place.

### Transporting your vacuum

- To move your vacuum cleaner from room to room, unplug the unit and carry using the carry handle.
- Never pull the vacuum cleaner by its cord or the flexible hose when moving.

 
### Servicing and maintenance

- Ensure you replace the filters when necessary.
- Always empty the bag when indicated on the vacuum cleaner.
- The plug of the power cord must be removed from the wall socket before changing the bag, cleaning the appliance or undertaking any maintenance operations.
- If the power cord becomes damaged, do not use the vacuum cleaner, it must be replaced by an authorised service agent.

## Specification

|               |                                                                                     |
|---------------|-------------------------------------------------------------------------------------|
| Model Number: | VC1208 series                                                                       |
| Filtration:   | 5 level filtration                                                                  |
| Features:     | floor brush<br>2-in-1 brush<br>extension tube<br>suction control on the hose handle |

# Parts identification

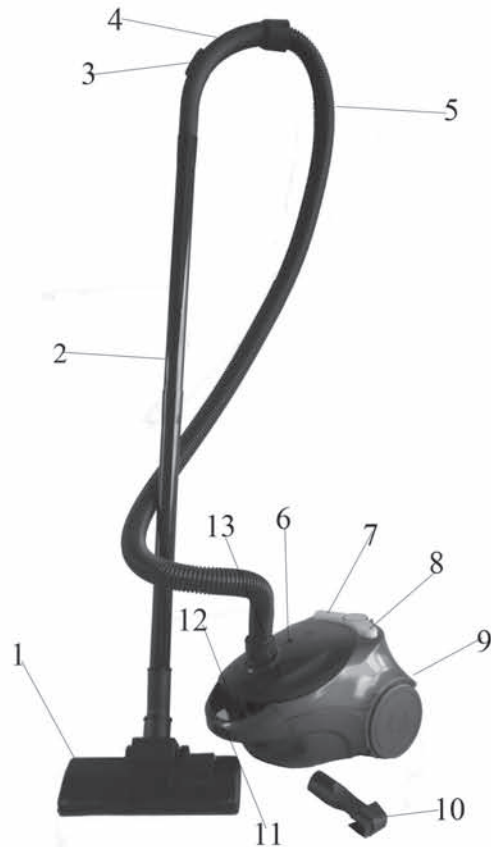

- |                        |                                 |
|------------------------|---------------------------------|
| 1. Floor head.         | 7. Cable rewind button          |
| 2. Extension tube.     | 8. Power button.                |
| 3. Suction control.    | 9. Filter outlet.               |
| 4. Hose handle.        | 10. Combi brush                 |
| 5. flexible hose.      | 11. Carry handle.               |
| 6. Bag full indicator. | 12. Dust bag compartment catch. |
|                        | 13. Dust bag compartment.       |

# Assembly

- Remove your vacuum cleaner carefully from the box. You may wish to store the packaging for future use.

 
## Mains power

- Your vacuum cleaner is equipped with a cord power and plug.
- Plug your power cord into the main socket. Ensure the voltage is compatible before switching on your vacuum.
- When not in use, unplug your vacuum from the mains power.

## Assembly




- Place the Hose connector into the hose inlet socket as shown above.
- To release the hose connector press the button on the side of the connector and pull out of the hose inlet socket.

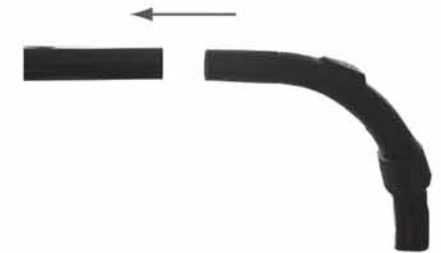

- Slide the upper handle into the extension tube (if required).



 - Slide the upper tube into the bottom tube

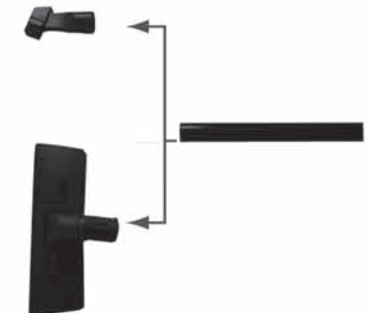

- Slide the extension tube into the required attachment.

# Using the vacuum cleaner

## Switch on



- Press the On/Off switch to turn the cleaner on.

## Rewinding the cable



Hold the cable in one hand, and press the cable rewind button with your foot, feeding the cable back slowly.

## Using the VC

- The floor head is generally used for daily cleaning of carpets and hard floors.
- The crevice tool can be used for slipping down the side of chairs and sofas, reaching into corners along baseboards etc.
- The upholstery tool can be used for vacuuming chairs, curtains and more delicate areas.
- Connect the required tool by pushing and twisting gently onto the end of the extension tubes.
- Pull the power cord gently to the required length, the maximum length is signified by the yellow and red marking on the power cord.  
Do not attempt to pull past the red marker.
- Ensure that your power supply is 220-240V AC 50/60Hz then plug the cord into the outlet.

## WARNING

**IMPORTANT:**  
DO NOT USE THIS CLEANER STANDING ON END. THIS WILL CAUSE OVERHEATING AND MAY DAMAGE THE CLEANER OR FLOOR COVERINGS.

4

# Maintenance

## DUST BAG

- The bag full indicator will automatically change to red when the dust bag is full or when the tube is blocked. The bag should be changed and/or the blockage should be removed from the hose or tubes to prevent the vacuum cleaner from overheating and causing damage.

## To change the dust bag



- Press the top of the dust bag compartment catch and lift the dust bag compartment cover until it clicks in the upright position.
- Pull out the dust bag.



## Replacing the bag

- Slide the bag into the bag holder.
- Close the dust cover lid.

## FILTER CLEANING

### Filter 1

- The filter should be removed and rinsed twice a year or whenever it is visibly clogged.
- Always operate the unit with the filter installed or damage may occur to the unit.
- Remove the dust bag as shown on the left, the filter is shown in the diagram below.



- Remove filter.
- Hand wash in cool soapy water.
- Rinse thoroughly under running water to remove all particles and soap.
- Allow to dry naturally.
- Replace filter when dry, operating with a damp filter will damage the motor and void the warranty.

### Filter 2

- The second filter is located at the rear of the unit.
- To clean this filter unclip the grille as shown in the diagram and shake the filter to clear any dust which may have accumulated. It's washable in water as well.



- Replace the grille.

**Do not machine wash the filter and do not attempt to dry using any kind of heated appliance.**

5

# Store & stow away system



Store system



2-in-1 nozzle store compartment



## Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

### Model:

VC1208-100, VC1208E-100;  
VC1208-120, VC1208E-120;  
VC1208-140, VC1208E-140.

### Ratings:

220-240V~, 50/60Hz, Class II for all models  
VC1208-100, VC1208E-100:1000W;  
VC1208-120, VC1208E-120:1200W;  
VC1208-140, VC1208E-140:1400W.

## IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precaution should always be followed, including the following:

1. To reduce the risk of electric shock, do not use outdoors or on wet surfaces
2. Unplug from outlet when not in use and before servicing.
3. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
4. To rewind the power cable, press the cable rewind button with one hand and guide the cable with the other hand to ensure that it does not whip causing damage.
5. Do not use with damaged cord or plug. If vacuum cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, enter it to a service center.
6. Do not pull or carry on cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.
7. Do not allow to be used as a toy. Close attention is necessary when used by near children.
8. Do not handle plug or vacuum cleaner with net hands.
9. Do not use with any opening blocked. Keep free of dust, lint, hair and anything that may reduce airflow.
10. Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
11. Do not use without dust cup/dust filter in place.
12. The dust filter need regular servicing and cleaning.
13. Do not pick up hard or sharp objects such as glass, nails etc. Do not pick up hot coals, cigarette butts or any hot, smoking or burning objects.
14. Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
15. Use extra care when cleaning on stairs.
16. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
17. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.