

Instruction Manual

High performance handheld Vacuum Cleaner



Model: VC1601GA, GB

Please read the manual carefully before operating your vacuum cleaner. Retain it for future reference.

Important safety Instructions

To avoid potentially fatal electric shocks:

- Do not use the appliance outdoors.
- Never use the hand vacuum cleaner if the cable, plug or casing are damaged.
- To avoid risks, arrange for damaged power cables and/or plugs to be replaced as soon as possible by a qualified specialist or by our Customer Services.
- Arrange for repairs to be carried out only by specialist workshops. Under no circumstances should you open the appliance yourself. Interference that are not carried out by a specialist workshop could lead to physical injuries.
- Before switching the hand vacuum cleaner on, ensure that the mains voltage corresponds to the voltage indicated in the technical data for the appliance.
- Never touch the power supply or the appliance with wet or damp hands.

To avoid the risk of injury:

- Do not change any accessories while the appliance is switched on.
- Do not use the hand vacuum cleaner for vacuuming up sharp objects or glass shards.
- Never vacuum up burning matches, glowing ashes or cigarette butts.
- Do not use the hand vacuum cleaner for vacuuming up chemical products, stone dust, gypsum, cement or similar particles.
- Do not use the hand vacuum cleaner for vacuuming up liquid, water or similar particles.
- This appliance is not suitable for use with inflammable and explosive substances or chemical and aggressive liquids.
- Always store the appliance indoors. To prevent accidents, keep the appliance in a dry location when not in use.
- **This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.**


Tips for safety:

- Use only accessory parts recommended by the manufacturer.
- Always grip the power plug to disconnect the appliance from the power supply.
- Always be sure to keep the hand vacuum away from heating elements, ovens or other heated appliances and surfaces.
- Always make certain that the ventilation slits are open. A blocked ventilation circuit can result in overheating and damage to the appliance.
- Take special care when using the hand vacuum on stairs.
- Do not use the hand vacuum without the dust filter inserted.

Overview of the appliance


(VC1601GA)

1. Main Handle
2. Power Switch
3. Combined Crevice Nozzle
4. Dust Container Release Button
5. Dust Container(Cup)
6. Dust Container Upper lid
7. Dust Filter Assembly
8. Dust Container Bottom lid
9. Dust Release Button
10. Power Cord & Plug
11. Suction Inlet
12. Extended Tube
13. Floor Brush

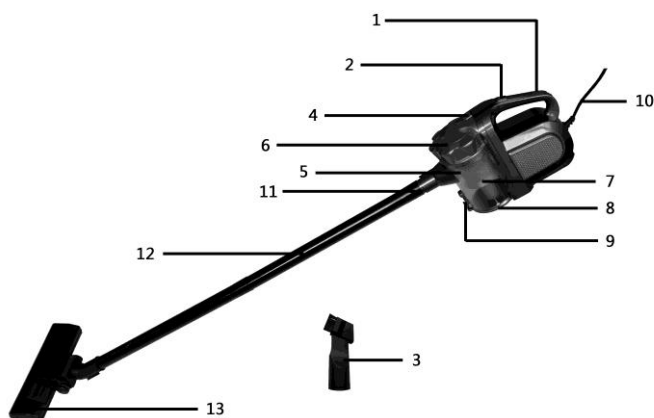


VC1601GB

 1. Main Handle
2. Power Switch
3. Combined Crevice Nozzle
4. Dust Container Release Button
5. Dust Container(Cup)
6. Dust Container Upper lid
7. Dust Filter Assembly
8. Dust Container Bottom lid
9. Dust Release Button
10. Power Cord & Plug
11. Suction Inlet
12. Extended Tube
13. Power Floor Brush
14. Rotating Brush Release Button
15. Floor Brush LED Lamps

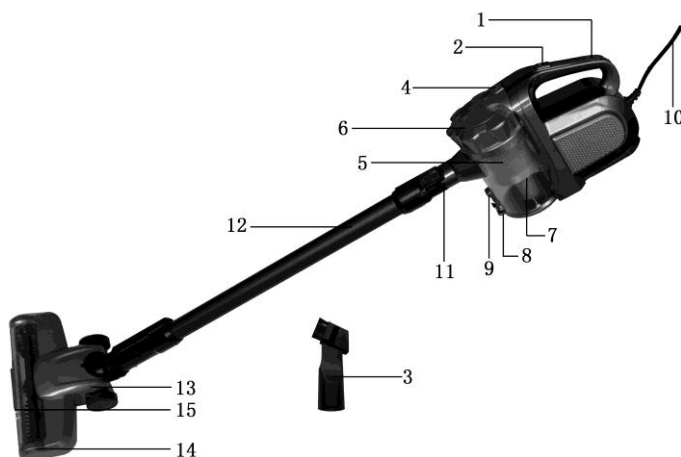

How to use accessories

 All accessories can be connected with the unit directly, except the power brush.

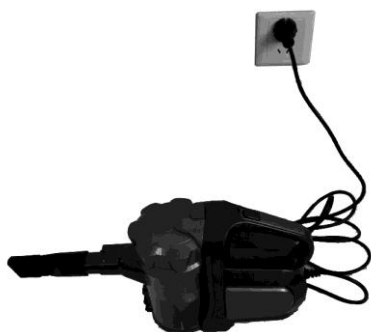



To use small accessories with the al. tube,

Technical data

Model: VC1601GA, VC1601GB

Input voltage /current: 220-240V 50/60Hz, or 120V ~, 50/60 Hz

Nominal power: 600W


Protection class: II, with thermostat

Operation Instructions


Assemble the unit

Note: Ensure that the handheld vacuum cleaner is not connected to the power socket before assembling the extended tube.

1. take out of handheld vacuum cleaner, extended tube and floor brush.
2. insert the extended tube into the suction inlet of handheld vacuum cleaner firmly. Please make sure that the extended tube is inserted firmly before use the upright vacuum cleaner

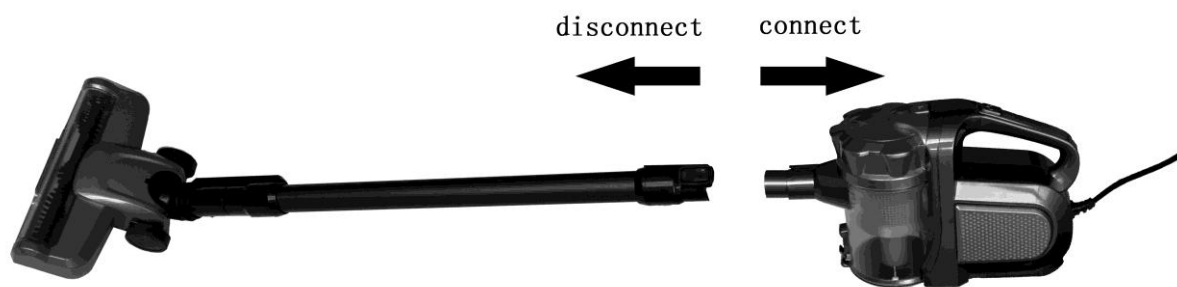


3. Connect the floor brush with the extended tube. Please insert the extended tube into the floor brush. You will hear the “click” when the extended tube is assembled rightly.

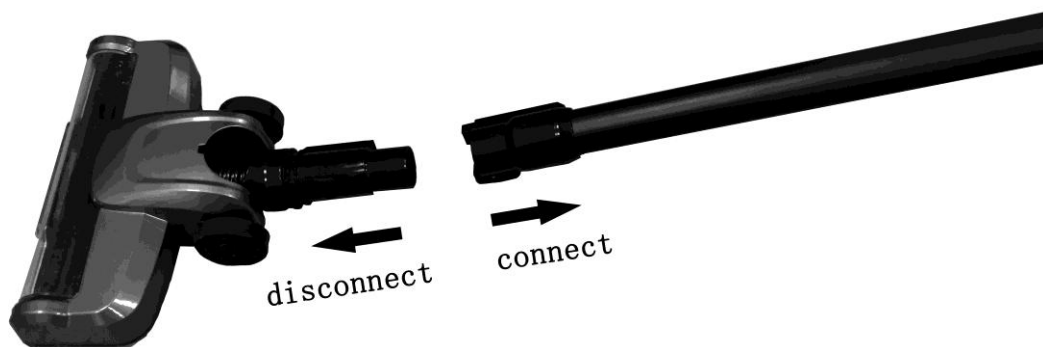

Use the handheld vacuum cleaner

1. The handheld vacuum cleaner can be used directly. The combined crevice nozzle can be used with the handheld vacuum cleaner directly. If you have the connection converter, it can be connected with your other suitable brush.

2. Press the power switch to start the machine.

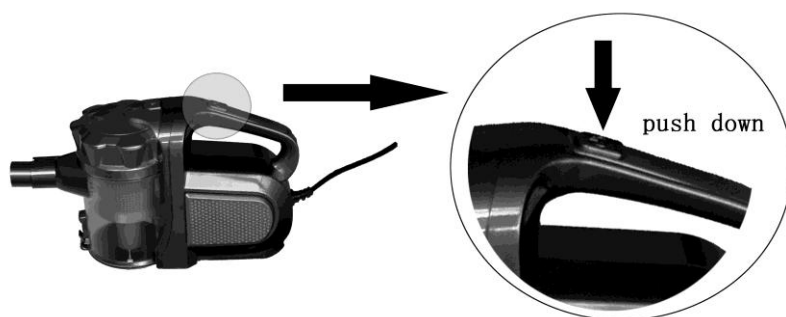

Use the upright vacuum cleaner

1. To use the upright vacuum cleaner, ensure that the handheld vacuum cleaner is connected with the extended tube and floor brush rightly.

2. Press the power switch on main handle to start/stop the machine.

Detach the handheld vacuum cleaner from the unit

Note: Ensure that the unit is not connected to the power socket before detach the handheld vacuum cleaner.

1. To remove handheld vacuum cleaner from the unit, grasp the handle of handheld vacuum cleaner and pull out of the extended tube.

2. You can use the handheld vacuum cleaner directly. If need to reassemble the unit, please refer the instruction of assemble the unit.

Empty the dust container & dust filter

Note: To get the best performance, empty the dust container and clean the dust filter after 5 cleanings.


Push down the dust release button.




Clean the dust container & dust filter

Note: To get the best performance, empty the dust container and clean the dust filter after 5 cleanings.


1. Remove the handheld vacuum cleaner from the unit. Press down the release button to remove the handheld vacuum cleaner.

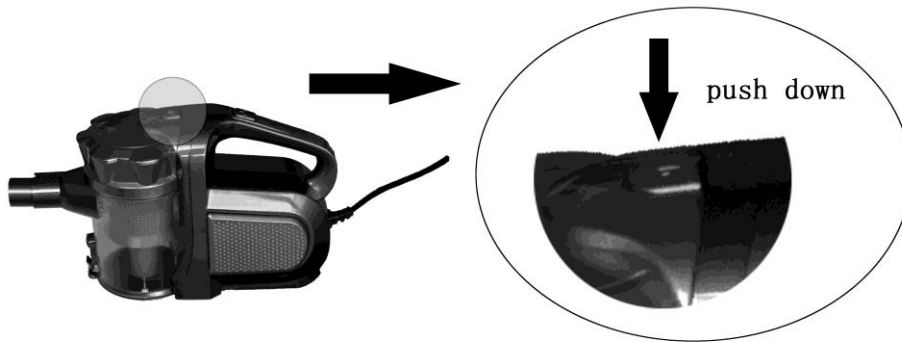

2. Press down the release button of dust container and then remove the dust container from the handheld vacuum cleaner as the following picture.

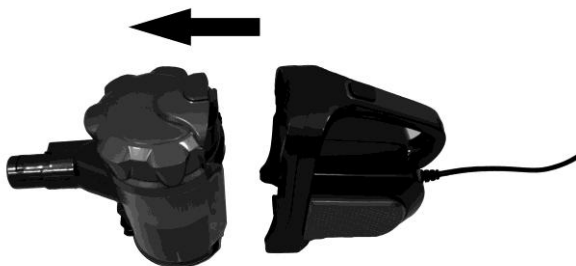

3. Rotate the dust container upper lid towards the "unlock" marking and take out of the upper lid. Then take out of the dust filter assembly.

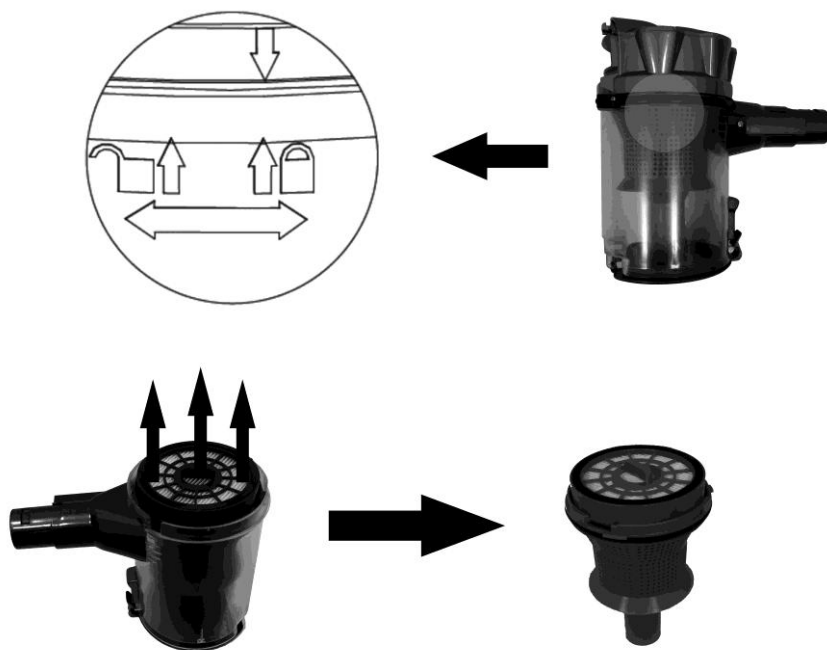

4. Rotate the upper dust filter assembly toward the gap direction to detach the HEPA filter and plastic cyclone filter. Then wash them with cold water. After washing dry completely, please rotate the filter set to assemble the dust filter assembly. **Do not** use a washing machine to clean the dust filter assembly. Do not use a hair dryer to dry it. **Air dry only.**



5. Replace the dust filter assembly back into the dust container and push the dust filter assembly to fix firmly in the dust container. **NEVER** operate vacuum cleaner without dust filter assembly in place.

6. Attach the dust container assembly to the handheld vacuum cleaner.

CAUTION: The suction inlet must be open and free of any obstructions at all times. Otherwise, the motor will overheat and could be damaged.

Note: it is recommended that the filter will be replaced every three(3) to six(6) months depending on usage to ensure best performance of the vacuum cleaner

TROUBLE SHOOTING GUIDE			
PROBLEM		POSSIBLE REASON	POSSIBLE SOLUTION
handheld	vacuum	no power socket	check fuse or breaker, replace fuse/reset breaker.

cleaner does not work		
handheld vacuum cleaner cannot pick-up dust; suction power become weak	1. dust container is full. 2. Dust filter needs cleaning or replacement.	1. empty dust container 2. remove dust filter assembly and check for object(s) in suction inlet and remove. Clean or replace dust filter assembly.
Dust leak from handheld vacuum cleaner	1. dust container is full. 2. dust filter is not installed correctly. 3. puncture/hole in dust filter	1. empty dust container 2. Review the dust filter assembly installation instructions. 3. replace dust filter assembly.
Hear strange noise when the appliance work	check whether the floor brush and dust filter is blocked by big dust; check whether dust container is full.	stop to use the appliance right now; clean the dust filter assembly and floor brush, empty the dust container. If the problem cannot disappear, pls call customer service

Please Note

The dust filter is washable. It should, however, be replaced every three(3) to six(6) months depending on usage, to ensure best performance of your vacuum cleaner.

Important

Make sure that dust filter has completely air dried before replace back in the handheld vacuum cleaner.

WARNING:

Correct Disposal of this product	
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe.