

INSTRUCTION MANUAL

VACUUM CLEANER



This appliance is for household use only
Suzhou iWash Electric Co. Ltd.
No. 35 Changan Road, Xukou, Wuzhong
District, Suzhou, PRC

Safety instructions

! Read all the safety instructions before you use your vacuum cleaner

Power source

- You should only plug your vacuum cleaner into a 220-240V AC 50/60Hz supply

Using your vacuum

- For safety reasons you should not vacuum wet surfaces, pick up wet objects or use in wet conditions.
- Do not use the vacuum cleaner to pick-up burning objects as this is a fire risk!
- Do not pick up hot objects such as coal and ashes.
- Do not use the vacuum cleaner to pick-up large objects that are likely to cause damage.
- Do not run over the mains cable with your vacuum cleaner. Do not use with damaged cord.
- Use only for domestic use. Industrial or commercial use invalidates the warranty.
- Most new carpets have a breaking in period in which only light vacuuming is recommended.
- Do not let children use the vacuum. Keep hair, loose clothing, fingers, feet and body parts away from openings or moving parts.
- Do not use without dust bags or filters in place.

Transporting your vacuum

- To move your vacuum cleaner from room to room, unplug the unit and carry using the carry handle.
- Never pull the vacuum cleaner by its cord or the flexible hose when moving.

Servicing and maintenance

- Ensure you replace the filters when necessary.
- Always empty the bag when indicated on the vacuum cleaner.
- The plug of the power cord must be removed from the wall socket before changing the bag, cleaning the appliance or undertaking any maintenance operations.
- If the power cord becomes damaged, do not use the vacuum cleaner, it must be replaced by an authorised service agent.

This appliance may be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning safe use of the appliance and understand the hazards involved. Children should not play with the appliance. Children should not carry out cleaning and user maintenance without supervision.

29 This appliance may be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning safe use of the appliance and understand the hazards involved. Children should not play with the appliance. Children should not carry out cleaning and user maintenance without supervision

Specification

Model Number: SA-VC2951
Filtration: 5 level filtration
Features: floor brush
2-in-1 brush
extension tube
suction control on the hose handle

Store & stow away system



Store system



Stow away system



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2006/95/EC

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent material to be recovered to obtain significant saving in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.



 
2-in-1 nozzle store compartment

Maintenance


Emptying the canister

If the dust in the canister reaches the Max or the suction power goes down significantly, the canister should be cleaned in time.

- Press the button on handle to take off the canister.

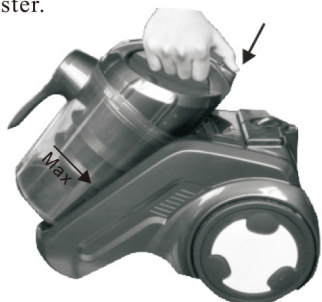

 - Put the canister above a dust bin then push the canister bottom button to release the dust.

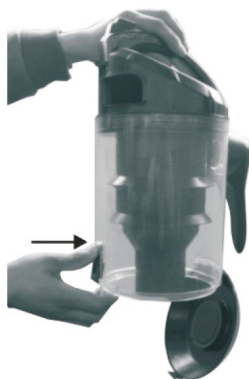


- In normal operation the suction power of the machine will not lose when the dust is below “max” line. The machine can be re-used after emptying the canister.
- In case the suction power goes down significantly after long time, then the fine dust in the canister /filter must be cleaned.

FILTER CLEANING

Below procedure should be followed


Filter 1

 - Holding the two handles, rotate the canister lid to the right side to open it.

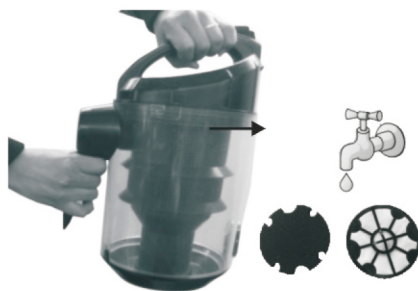

- Tap the HEPA and sponge filters, or wash them in pure water to clean them, allow drying naturally.

 Filter 2

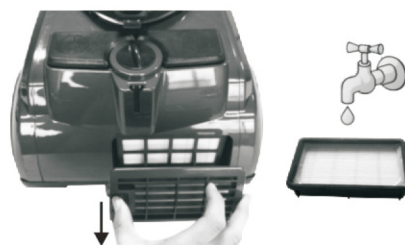


- Watch the parts inside the canister and tap or wash them in case a lot of fine dust is accumulated.
- Rotating the cover per the arrow direction, detach the parts inside the canister.



- Finally assemble the machine per the reverse procedure. Pay attention to the HEPA and sponge filter direction

 Parts identification

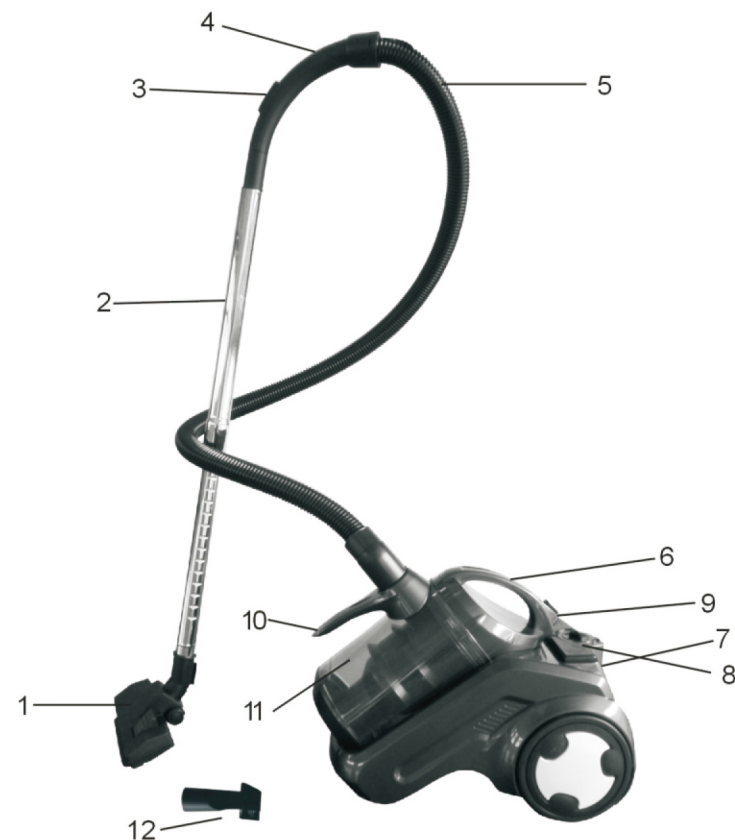

1. Floor brush
2. Extension tube
3. Suction control
4. Hose handle
5. Flexible hose
6. Top handle

7. Filter outlet
8. Cable rewriter button
9. Power button
10. Front handle
11. Canister
12. Combi brush

Assembly

- Remove your vacuum cleaner carefully from the box. You may wish to store the packaging for future use.

 
Mains power

- Your vacuum cleaner is equipped with a cord power and plug.
- Plug your power cord into the main socket. Ensure the voltage is compatible before switching on your vacuum.
- When not in use, unplug your vacuum from the mains power.

Assembly




- Place the Hose connector into the hose inlet socket as shown above.
- To release the hose connector press the button on the side of the connector and pull out of the hose inlet socket.

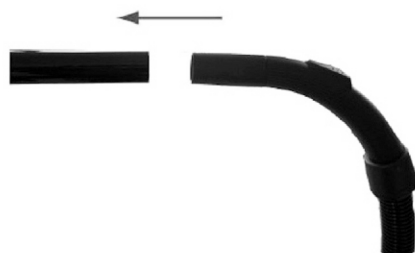

- Slide the upper handle into the extension tube (if required).



 - Slide the upper tube into the bottom tube

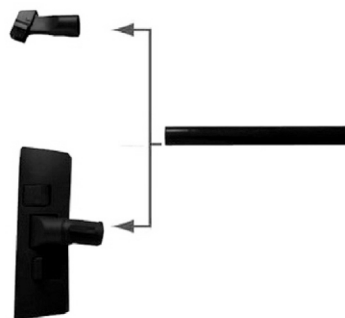

- Slide the extension tube into the required attachment.

Using the vacuum cleaner

Switch on

 


- Press the On/Off switch to turn the cleaner on.

Rewinding the cable



Hold the cable in one hand, and press the cable rewind button with your foot, feeding the cable back slowly.

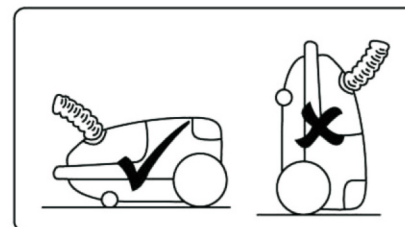

Using the VC

- The floor head is generally used for daily cleaning of carpets and hard floors.
- The crevice tool can be used for slipping down the side of chairs and sofas, reaching into corners along baseboards etc.
- The upholstery tool can be used for vacuuming chairs, curtains and more delicate areas.
- Connect the required tool by pushing and twisting gently onto the end of the extension tubes.
- Pull the power cord gently to the required length, the maximum length is signified by the yellow and red marking on the power cord.
Do not attempt to pull past the red marker.
- Ensure that your power supply is 220-240V AC 50/60Hz then plug the cord into the outlet.

WARNING

IMPORTANT:
DO NOT USE THIS CLEANER STANDING ON END. THIS WILL CAUSE OVERHEATING AND MAY DAMAGE THE CLEANER OR FLOOR COVERINGS.