

VC1503 series

 
 
 
Wet, dry and blow 3-in-1 vacuum cleaner



Thank you for choosing the Wet & Dry Vacuum Cleaner

Product Overview

- 1. Suction inlet
- 2. Top housing
- 3. On/off switch
- 4. Carry handle
- 5. Tank
- 6. Bottom chassis
- 7. Rear wheel
- 8. Castor

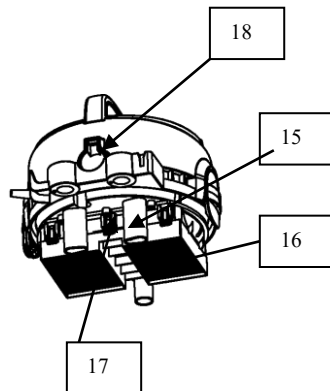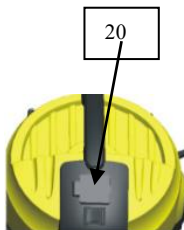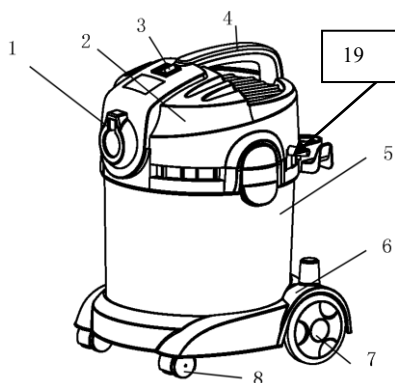

- 9. water brush
- 10. Metal Telescopic tube(optional)
- 11. Crevice nozzle
- 12. Hose
- 13. Carpet/hard floor brush
- 14. 2-in-1 Nozzle
- 15. Water cut out sensor(probe)
- 16. HEPA
- 17. HEPA hook
- 18. Blow outlet
- 19. Head lock
- 20. Socket (optional)

1. Safety instructions

- Before using the vacuum cleaner always read the operating instructions and keep them
- The following materials should not be picked up by the vacuum cleaner: hazardous dust, hot materials (burning cigarettes, hot ash, etc.), flammable, explosive, aggressive liquids, explosive dust, sharp metals etc
- This device is not intended for use by persons (including children) with reduced physical, sensory or mental abilities or lacking experience and/or knowledge, unless they are supervised by a person responsible for their safety or are instructed by these persons on the use of the device. Children should be supervised, to ensure that they do not play with the device
- Never touch the mains plug and the socket with wet hands
- Ensure that the voltage shown on the rating plate corresponds to the voltage of the local mains power supply. It is recommended that the vacuum cleaner should be connected via a residual current circuit breaker
- Inspect power cord regularly to detect signs of damage, e.g. cracks or ageing. If the power cord is damaged, it must be replaced by an electrician to avoid danger before use of the vacuum cleaner is continued
- Never use the vacuum cleaner if the filter is damaged
- Switch the appliance off after every use and prior to every cleaning/maintenance procedure
- Do not pull the plug from the socket by pulling on the connecting cable.
- Protect the unit from rain. Do not store outside
- Use the vacuum cleaner only with original filter bag, original spare parts, accessories and special accessories
- The manufacturer is not responsible for any damages that may occur on account of improper use or wrong operations.


.This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

2. Operating instructions

The appliance is intended for use as a vacuum cleaner corresponding to the descriptions given in these operating instructions and the safety instructions.

Usage: For household, hobby, workshop, car cleaning, sucking up dust and liquids.

2.1 On/Off; auto start/stop function

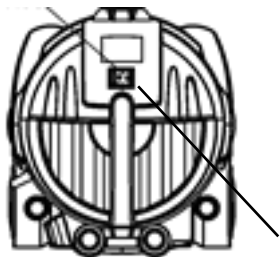

Switch



Socket

This socket can provide power supply for no more Than 1000W. Plug a power Tool less than 1000W, turn on the switch, the VC will be Automatically turned on when power tool is on; and off when power tool off.

2.2 Cleaning the filter element and protection


If the suction performance drops, check the dust tank and empty it in time.

This machine is designed with the auto Self cleaning system, the filter will be cleaned every 15s. It's normal if there is a sound of click every 15s. No need to clean any filters until they are clogged with dust which can not be cleaned by the machine automatically.


This machine is equipped with the water level cut out system and optional motor thermostat. If the water reaches to the probe level, the system will cut out the mains power supplier. Unplug the machine, empty the water to recover the machine. If motor is equipped with the thermostat and is activated by accident, just empty all dust, clean all filters and wait for about 30 minutes, the machine can recover by itself.

2.3. Connecting accessories

Follow the operating instructions and safety instructions for hose connected to the vacuum cleaner.

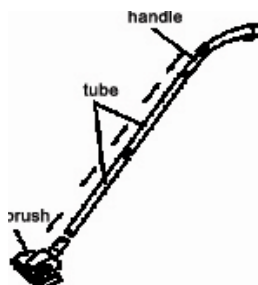


2.4 Adjust the suction power

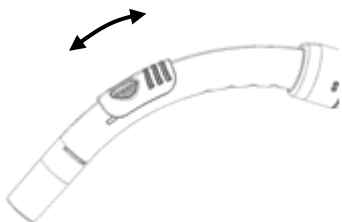


2.5 Picking up liquids

If foam develops or liquid emerges from the blow outlet, stop work immediately and empty the dirt tank

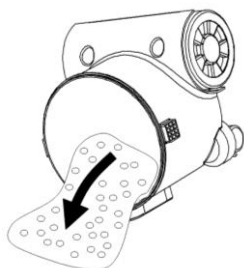

2.6 Blowing function

Cleaning hard to reach locations or, where vacuuming is not possible, like leaves from a gravel bed. Connect the hose (12) to the blow outlet.

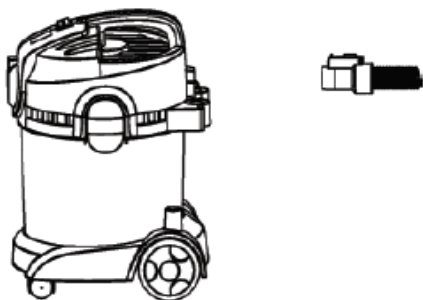

3. WEEE - Waste of Electric and Electronic Equipment & Environmental protection

Old appliances contain valuable materials that can be recycled. Please arrange for the proper recycling of old appliances. Please dispose your old appliances using appropriate collection systems.

Filters and filter bags are made from environment-friendly materials. They can be disposed off through the normal household garbage provided you have not sucked in substances that are not permitted to be thrown into household garbage.

Correct Disposal of this product	
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

4. Guarantee

The distributor is applicable with regard to the guarantee.

Warranty Information

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year (Germany: 2 years), starting from the date on which the appliance is sold to the end user.

The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service centre. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.


The warranty will not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- Use of force, damage caused by external influences
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliances

5. Maintenance, cleaning, repair

- Store the machine indoors and in a dry environment
- Never spray water on the upper section of the vacuum cleaner: Danger for persons, risk or short-circuiting.
- Clean the machine surface with a dry cloth or a damp cloth with a little cleaning agent.
- Follow the operating instructions and safety instructions to clean the filter

1, unlock the 6 hooks
To take off the HEPA

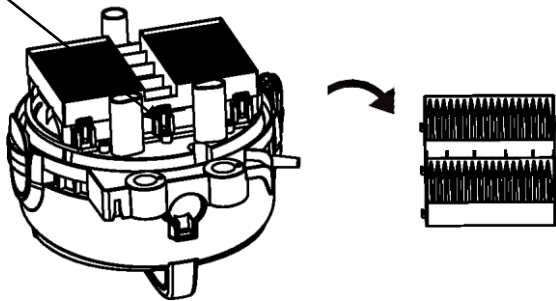

2, clean in water and dry naturally



- Order original spare parts and accessories from a local dealer.

