 


OWNER'S MANUAL

# ***Pet Vacuum Dryer***

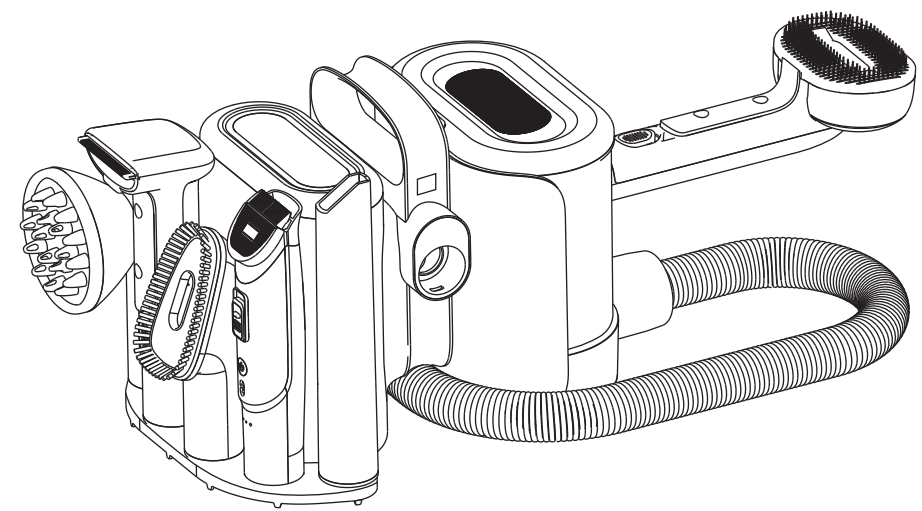

# CONTENTS

|      |                                 |      |
|------|---------------------------------|------|
| I    | SAFETY GUIDELINES               | - 02 |
| II   | PRODUCT SPECIFICATION           | - 04 |
| III  | PARTS LIST                      | - 05 |
| IV   | OPERATION GUIDE                 | - 06 |
| V    | MAINTENANCE AND CARE            | - 13 |
| VI   | IMPORTANT TIPS/COMMON QUESTIONS | - 16 |
| VII  | WARRANTY                        | - 17 |
| VIII | RETURN/REPLACEMENT              | - 17 |
| IX   | EXACME CUSTOMER SUPPORT         | - 18 |

## DISCLAIMER

Make sure that you read this manual completely before operating your new **ExacMe®** product. We are not and cannot be held responsible for any damage or injury incurred due to improper or unsafe use of the **ExacMe®** product. We specifically disclaim responsibility for any bodily injury or property damage that may occur during any use that does not comply with applicable federal, state, or local laws or ordinances.

## I SAFETY GUIDELINES

Read the safety guidelines before using your ExacMe® Pet Vacuum Dryer. Failure to follow the guidelines, warnings in this manual and those on your product can result in personal injury or product damage and will void the product warranty.

### SAFETY WARNING

- This product is only suitable for normal home environment, not suitable for industrial or outdoor use.
- Children or people who have difficulty making their own decisions should not use this product alone.
- Never let children use it alone.
- Be careful when using close to children or pets. In addition, do not allow children or pets to play with this product.
- Do not touch the product and plug with wet hand. In addition, do not suck into wet hair or liquid with this product.
- Do not use this product if the power cord or plug is damaged.
- Please contact us if the product is damaged, immersed into liquid and doesn't work well.
- Do not disassemble this product. Incorrect assembly may result in electric shock or fire. Please contact us if repairs are required.
- Do not suck into flammable or combustible liquids, such as gasoline. In addition, do not use this product close to flammable or highly flammable gases.
- Do not drag power cables, place heavy objects on the top of the product, or clamp power cables between doors.
- Do not suck into hot, burning or smoking objects with product, such as cigarettes, matches or hotash.
- Do not place items in the opening or use products while the opening is blocked.
- Turn off the switch and unplug the power cable after use and before maintenance or parts replacement.
- Do not use or keep this product outside or in damp or water-wet places such as bathrooms.
- Do not use products that contain spices or fragrances as filters. Such chemicals can cause fires.

II PRODUCT SPECIFICATION


 



 

- Do not touch the power cables or unplug the plug with wet hands. To avoid electric shock, please never do this.
- Do not smoke when using. Also, do not suck into flammable objects.
- Do not use it where it's flammable or with flammable liquids. Don't suck into flammable liquids or items as they may cause fire or explosion.
- It may smell bad when you use it at the first time, but it doesn't have any adverse effects on your body and it goes away after a while. However, if the smell of burning persists, please stop using it immediately.
- Please keep the dust cup and filters clean, otherwise, it might lead to malfunction or accident.
- Please turn off the power and unplug the plug from the socket before maintenance, otherwise, it would cause electric shock, accident, or injury.
- If the temperature of this product is abnormally high, please stop using it and find the reason.
  - A) The host is abnormally hot, stop using it immediately.
  - B) The air inlet is blocked. Please remove the dust cup, clean the air inlet and filter and wait 30 minutes before resuming to use it.
- Be sure to use each additional filter. Be sure to install a filter before use. If you remove the filter and use it, it may become damage.

PURCHASER'S AGREEMENT

By accepting delivery of this product, you promise that you will not change, alter, or modify this product or remove or render inoperable or unsafe any guards, shields or other safety features of this product. You will not refuse or neglect any retrofit kits that ExacMe® may provide to enhance and preserve the safe use of this product.

| Product Configuration          | Technical Parameters                                                                                |
|--------------------------------|-----------------------------------------------------------------------------------------------------|
| Model                          | 5566-PV3687                                                                                         |
| Rated voltage                  | 110V-120V                                                                                           |
| Rated power                    | 630W                                                                                                |
| Power cord length              | 98.43 Inches                                                                                        |
| Rated frequency                | 50Hz                                                                                                |
| Dust cup capacity              | 2.5L                                                                                                |
| Vacuum speed                   | Low 4KPa, medium 6-7KPa, high 12KPa                                                                 |
| Drying temperature             | Low 12°C/54°F above indoor, medium 46°C/115°F, high 55°C/131°F                                      |
| Heat-resistant hose            | 23.62 Inches, can with stand up to 80°C/176°F                                                       |
| Electric wireless clipper      | 18650 lithium battery 2000mAh*1, can be used during charging, charging 4-5 hours, working 4-5 hours |
| Product dimensions (L × W × H) | 10.24 x 8.07 x 9.84 Inches                                                                          |
| Gross/Net weight               | 9.48/7.72 LBS                                                                                       |


III PARTS LIST
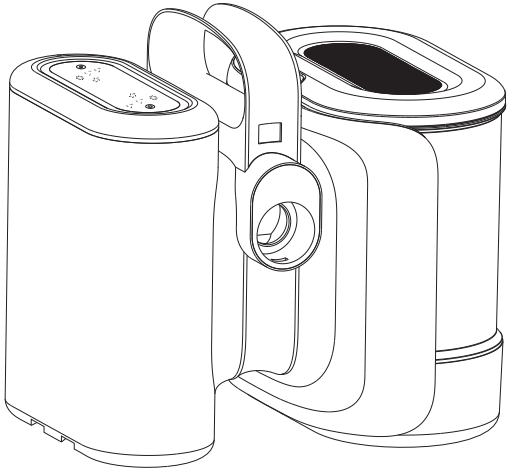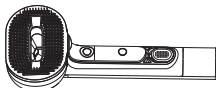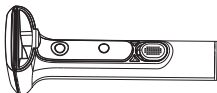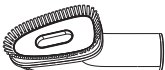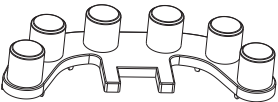
|                                                                                                                             |                                                                                                                    |                                                                                                                               |
|-----------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| <div>1 Vacuum dryer device</div>           | <div>2 Hose</div>                | <div>3 Electric clipper</div>              |
| <div>4 Guidance comb</div>                | <div>5 Grooming brush</div>     |                                                                                                                               |
| <div>6 De-shed brush</div>               | <div>7 Cleaning brush</div>     | <div>8 Diffuser</div>                      |
|                                                                                                                             |                                                                                                                    | <div>9 2-in-1 Long crevice nozzle</div>  |
| <div>10 Accessory storage station</div>  | <div>11 Filter cartridge</div>  | <div>12 USB cable</div>                   |
|                                                                                                                             |                                                                                                                    | <div>13 Shaver brush</div>               |






**NOTE** If there is any broken or missing part, please feel free to contact us, we will do our best to assist you to solve the problem as soon as possible.

IV OPERATION GUIDE

 01: Vacuum Dryer Device Identification

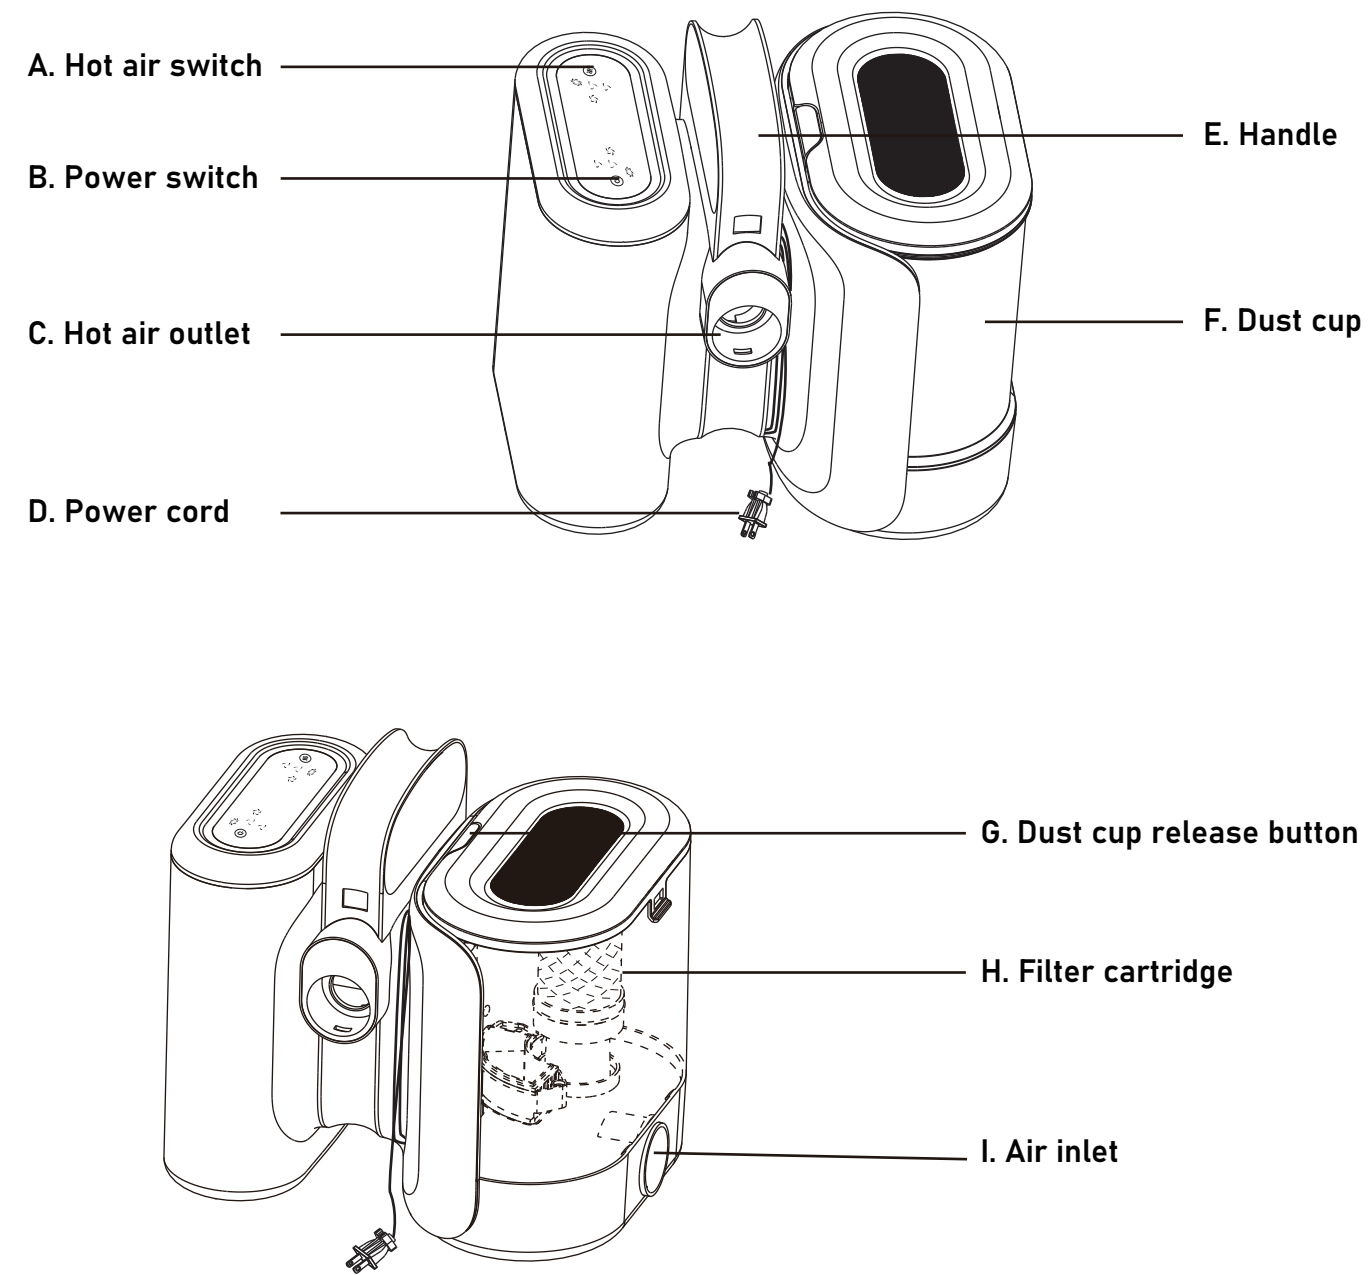


02: Accessories Applications
     
| Name                       | Picture                                                                             | Applications                                                       |
|----------------------------|-------------------------------------------------------------------------------------|--------------------------------------------------------------------|
| Electric clipper           |    | Trim pet hair                                                      |
| Grooming brush             |    | Daily grooming to reduce tangles in pet hair                       |
| De-shed brush              |    | De-shedding efficiently and reduce pet hair loss, keep hair glossy |
| Cleaning brush             |    | Small area cleaning, pet paw cleaning                              |
| Diffuser                   |   | Dry skin and hair                                                  |
| 2-in-1 Long crevice nozzle |  | Vacuum: Clean up crevices, edges etc<br>Dryer: Dry skin and hair   |
| Accessory storage station  |  | Store accessories                                                  |
| Guidance comb              |  | Trim set length hair with electric clipper                         |
| Shaver brush               |  | Clean up the electric clipper                                      |

■ Warning!

Before using hot air always feel the right temperature of the air with your hand to prevent the machine from blowing higher temperature air to injure pets.

 03: Operation Instructions of The Device

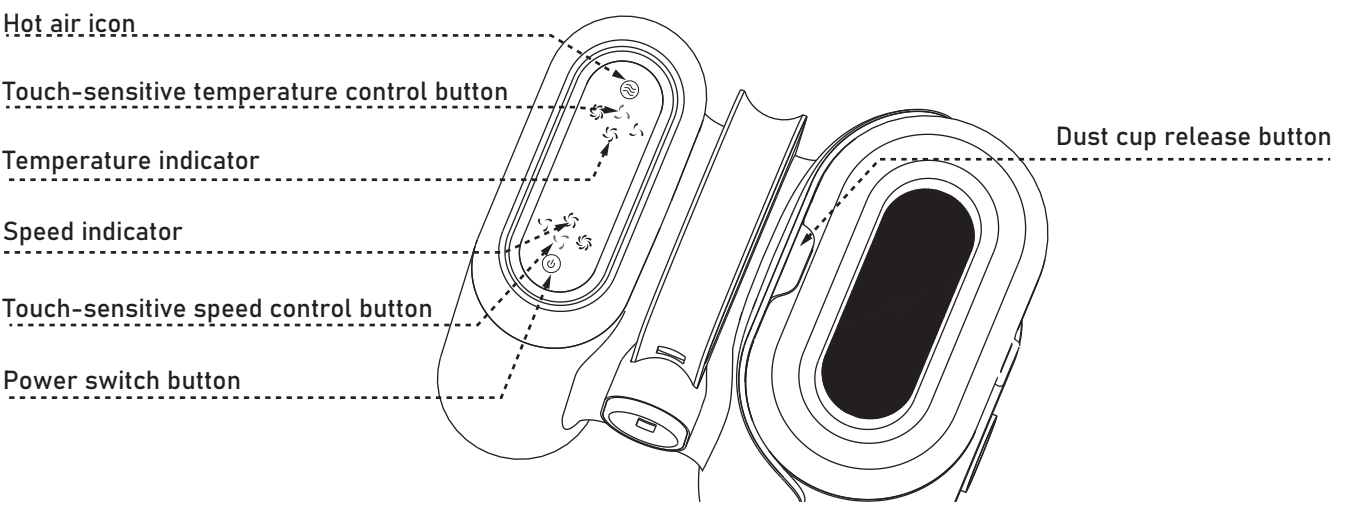

**Hot air icon:** Indicate the hot air function.

**Touch temperature control button:** Control the blowing temperature. When the hose connector is inserted into the hot air outlet, temperature I. Touch the button the machine circulates from I, II to III.

**Temperature indicator:** Display the machine temperature status. When "⌚" is on, it's at level I, which is about 12°C/54°F higher than the ambient temperature; when "⌚⌚" is on, it's at level II, the temperature is about 46°C/115°F, and it is recommended to use with the diffuser to dry skin/hair; when "⌚⌚⌚" is on, it's at III, about 55°C/131°F. (Room temperature is about 20°C/68°F). Please blow the hair with hose (fit with diffuser/2-in-1 long crevice nozzle) from suitable distance to prevent injury pets.

**Speed indicator:** Display the suction status of the machine. When "⌚" is on, it's at level I suction power; when "⌚⌚" is on, at level II and when "⌚⌚⌚" is on, at III.


**Touch speed control button:** Control the suction power. Touch the switch to circulate from I, II to III.

**Power switch button:** To turn on/off the power.

**Dust cup release button:** Push it to release the dust cup.

**NOTE** Speed II is recommended to grooming pets. Speed III is mainly not used for pets like picking up dust from floor etc.

## 04: Operation Instructions of Electric Clipper

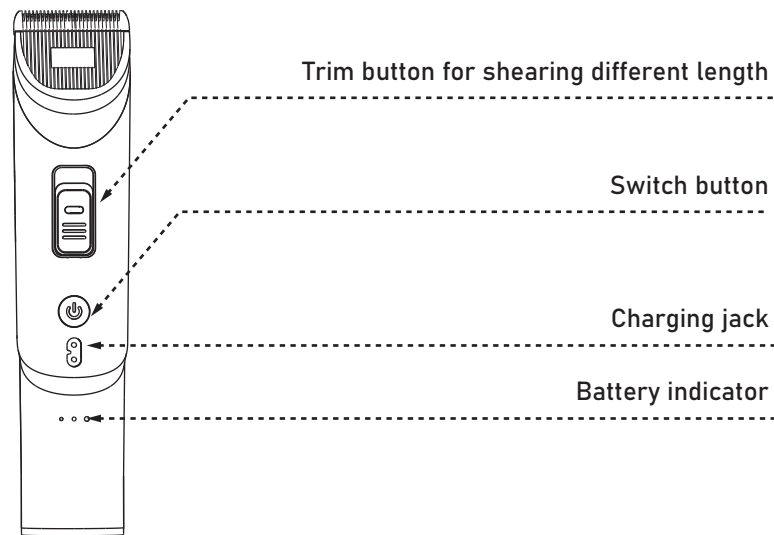

**Trim button:** Can adjust between 1.6 and 2.5mm. If a guidance comb is used, then the hair length is 1.6 or 2.5 mm, plus the guidance comb size.

**Switch button:** Push first time, at speed II; push 2nd time, speed I; push 3rd time, off. Push for 3s, clipper will be locked for safety from children. At this condition, push switch button clipper will not work. Push for 3s again to unlock then clipper can be used again. This clipper can be used during charging.

**Charging jack:** Use the charging cable to charge the machine, need mobile phone adaptor at 5V 1-2A.

**Power indicator:** Indicate the power of the clipper.

### NOTE

1. The indicator light will flash when the power is below 15%, please stop using immediately and charge the machine. During charging, the battery indicator will gradually light up and all on after fully charged.
2. It can be used for about 5 hours on a single charge.
3. If the product is not used for a long time, it is recommended to completely charge and discharge the machine every 3 months to avoid passivation of the battery electrodes.
4. If your clipper has a built-in lithium battery, you need to pay attention to the following matters:
  - a. Please store and use this product between 0-40°C/32-104°F.
  - b. It is normal that the charging speed will slow down in an room below 10°C.
  - c. Please charge in time when the battery is low.

### NOTE



5. This product uses recyclable lithium batteries and cannot be disposed of as general household waste at the end of its service life. So:
  - The battery must be removed from the appliance before discarding it.
  - When removing the battery, the appliance must be turned off.
  - Batteries should be disposed of safely. After removing the battery, please cut the power cord and hand it over to the relevant qualified department for recycling.
6. When charging the product, be sure to use the charging cord that comes with it. If you use a different charging cord, it may cause damage to the machine or other unexpected situations.

## 05: Assembly of Product


### NOTE

Before installing and replacing accessories, you need to turn off the power of the pet machine.


### 1. Install the dust cup as pictures

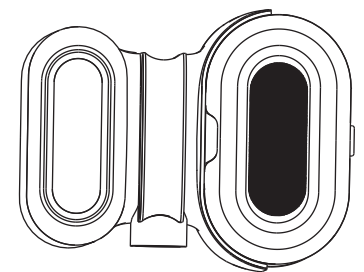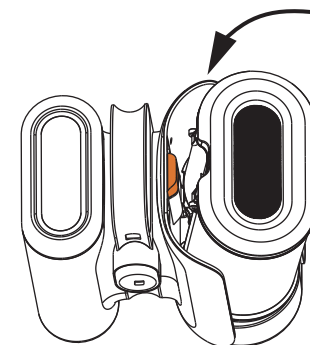

### 2. Install the hose as pictures

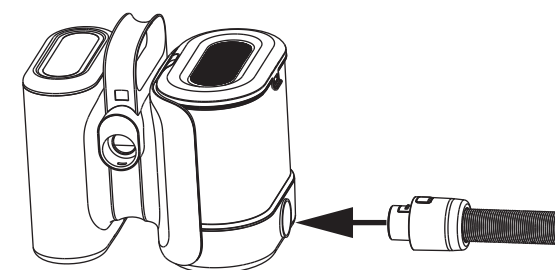


The hose is fitted into the air intake  
Vacuuming Function

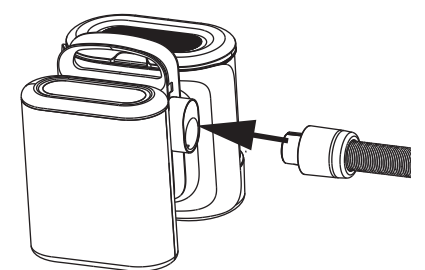

The hose is fitted into the hot air outlet  
Hot Air Blowing Function


### 3. Install the accessories

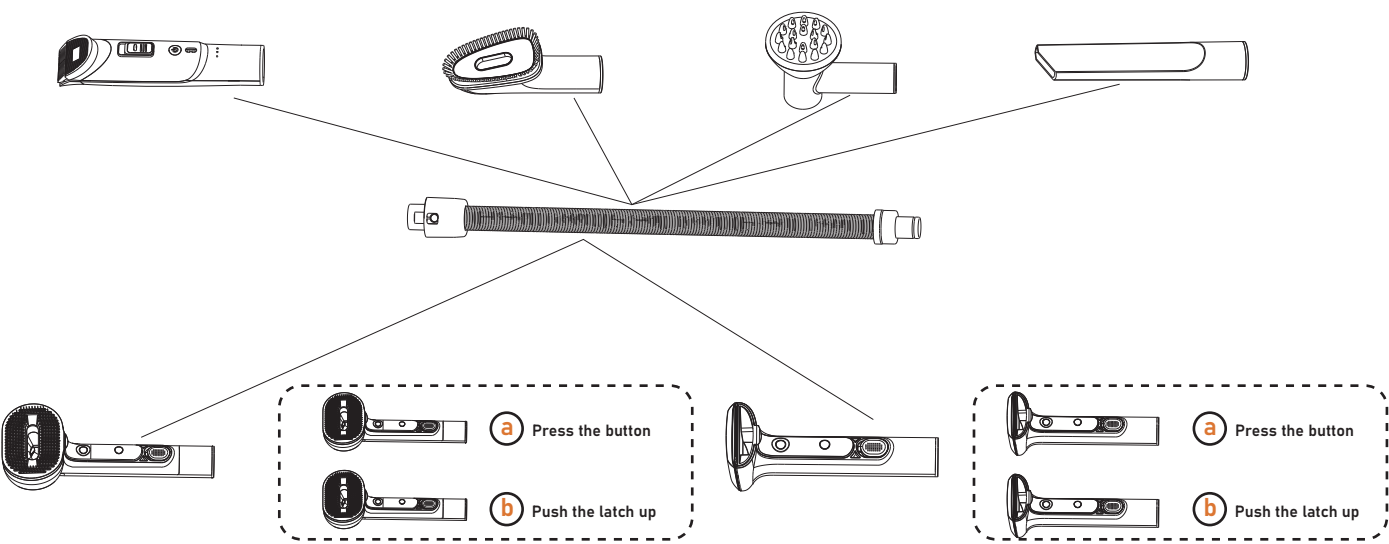

#### NOTE


For grooming brush and de-shed brush, press the button down, then push the latch up, the pins are outside, can comb the pet hair, push the latch down, press the button back and forth to push the hair down into the vacuum cleaner.

### 4. Machine storage

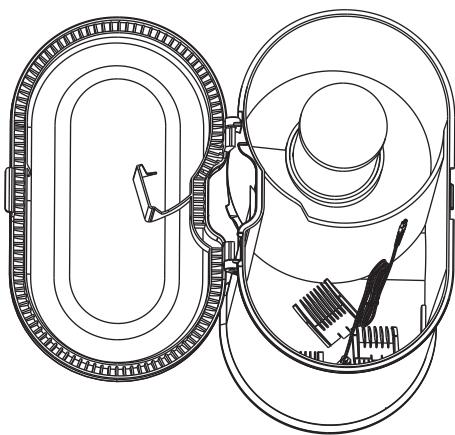

#### NOTE


When the machine is not in use, small items such as charging cable and guidance combs can be stored in the dust cup.

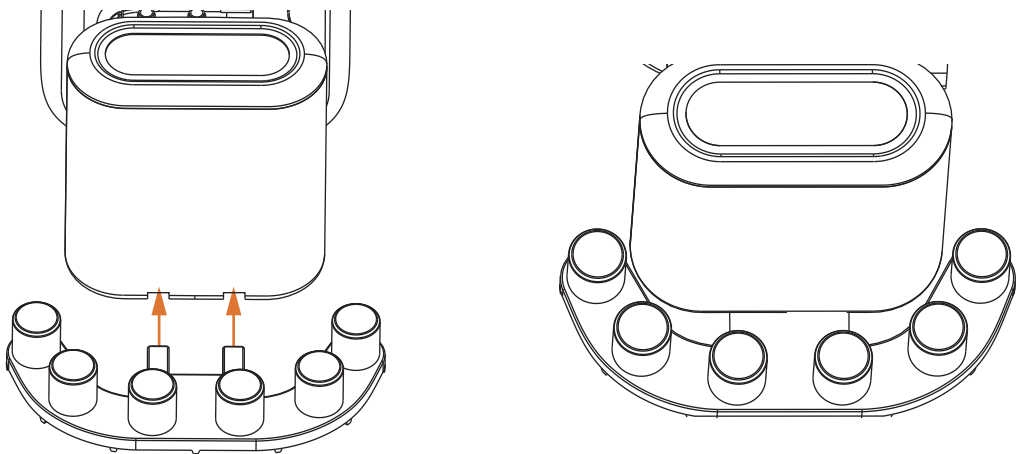

#### NOTE

Storage station to be inserted onto body.
 
### 5. Accessory storage

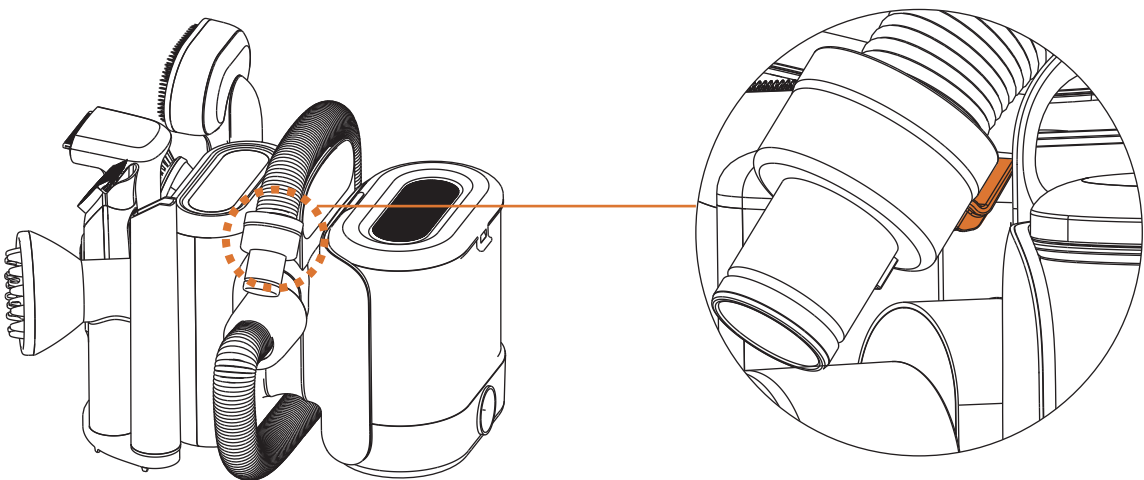


#### NOTE

1. The long crevice nozzle should be put as the picture.
2. The hose should be wrapped around the main unit and hooked.

## V MAINTENANCE AND CARE


### 01: Clean The Dust Cup

1. Turn off the power switch button and unplug the power plug.
2. Press the dust cup release button, the dust cup pops up, and you can remove the dust cup from the machine.
3. Open the lid of the dust cup and clean up the garbage in the dust cup.

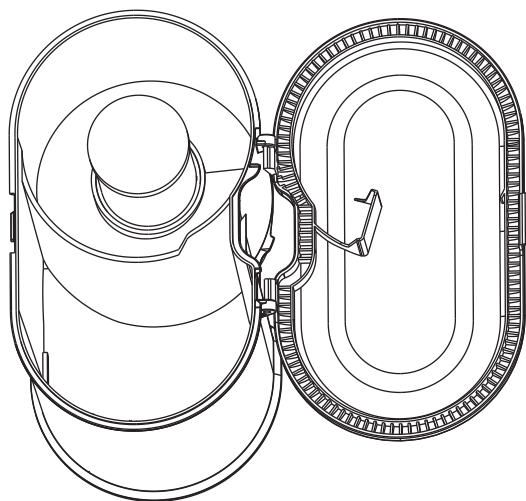

### 02: Clean Up The Filter Component

1. Open the lid of the dust cup, and the metal filter can be directly pulled out for cleaning from the bottom of the dust cup, the filter can be directly removed for cleaning.
2. To replace the dust cup, press it down as shown in the figure, hear a "click" sound, it's installed in place.

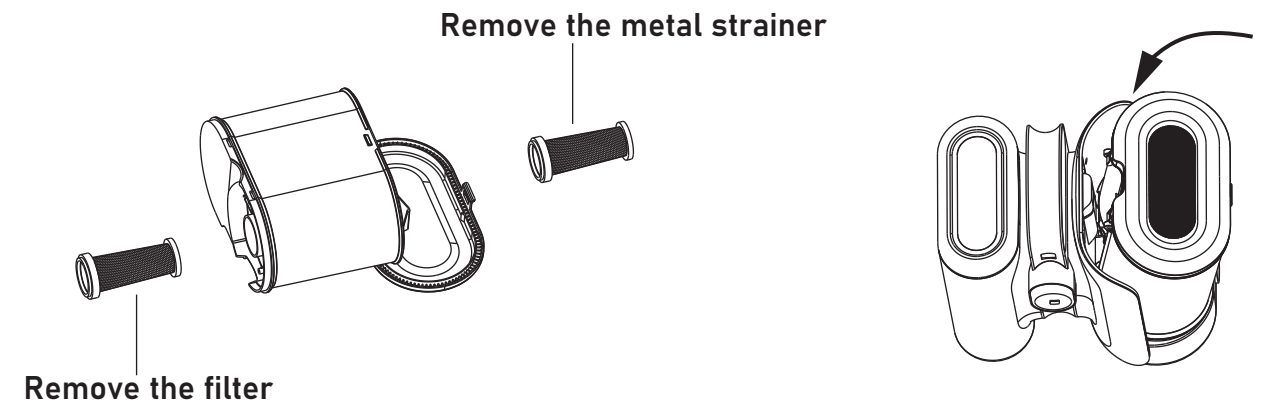


#### NOTE


1. The stainless filter and HEPA filter can be rinsed with clean water, and it needs to be dried after cleaning before being put back into the dust cup, wet filter will cause electric shock, motor short circuit or other faults.
2. Before installing the dust cup, make sure that all accessories, including the filter, are completely dry.
3. In order to maintain optimal cleaning performance and a clean environment, hairs in the dust cup need to be cleaned promptly before reaching the maximum line and after each use.

### 03: Clean Up The Electric Clipper


1. Please retract the movable knife adjustment knob to the bottom before removing the knife.

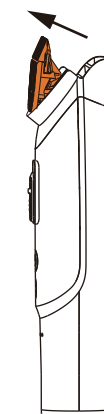

2. Vacuum/use the shaver brush to clean debris from the blade and the clipper.

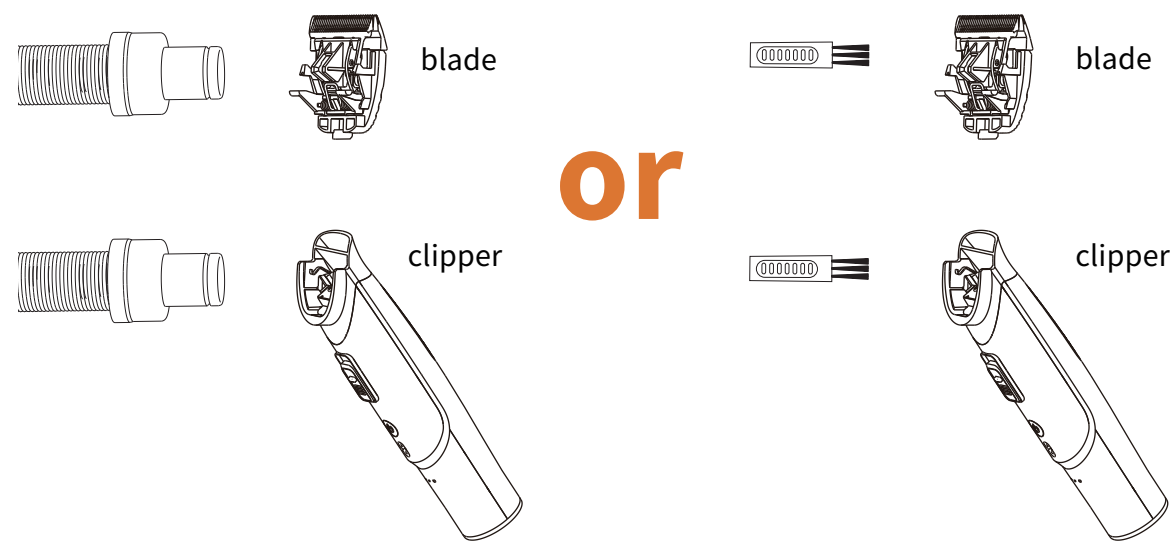

3. Drop the lubricant (**not included**) on the blade.

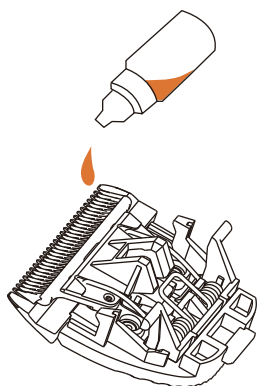

4. Please retract the movable knife adjustment knob to the bottom before installing the knife.



- NOTE**
- 1. Be careful when removing or installing the blade.
  - 2. When installing, align the blade at the bottom first, and then press it down. Please be careful not to press too hard.

## VI IMPORTANT TIPS/COMMON QUESTIONS

If you find that the machine is working abnormally, please turn off the machine and cut off the power!

In order to avoid unnecessary losses, please read the following carefully before contacting the repair organization.

| Problem                                         | Possible causes                                                                 | Remedies                                                                                                                                           |
|-------------------------------------------------|---------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| The product does not work                       | The power cord plug is not plugged securely                                     | Plug the power cord tightly into the power outlet                                                                                                  |
|                                                 | The power outlet is out of power                                                | Make sure the electrical outlet is with power                                                                                                      |
|                                                 | The power switch is not pressed on                                              | Press the power switch button                                                                                                                      |
| The suction is weakened and make a squeak noise | There is too much dust in the dust cup                                          | Clean the dust from the dust cup                                                                                                                   |
|                                                 | HEPA is dirty                                                                   | Clean up the HEPA                                                                                                                                  |
|                                                 | The suction inlet of the accessory is blocked                                   | Clean up the blockage                                                                                                                              |
| Suddenly stop working                           | The dust cup, filter assembly, air outlet, floor brush, or accessory is blocked | If this happens, turn off the switch button, unplug the power plug, remove the blockage, and allow the product to cool for 30 minutes before reuse |
| No hot air                                      | The hose is not plugged into the hot air outlet                                 | The hose is inserted into the hot air outlet                                                                                                       |
| Electric clipper does not work                  | No power or child locked                                                        | Press the switch for 3s to unlock or charge the battery                                                                                            |

VII WARRANTY

|                     |          |
|---------------------|----------|
| Vacuum dryer device | ★ 1 Year |
| Electric clipper    | ★ 1 Year |
| Other accessories   | ★ 1 Year |

CONSUMER WARRANTY LIMITATIONS AND EXCLUSIONS

- All warranties begin on the date of delivery.
- All warranties are to the original purchaser from ExacMe® ONLY.
- ExacMe® will replace the defective parts or send replacement parts, excluding components with damage caused by:
  - Abuse, misuse, accident, or negligence
  - Commercial use, or use other than normal
  - Improper operation, maintenance, or storage

NOTE

ExacMe® is responsible for the shipping fee on all warranted parts.  
For product beyond the limited warranty period, we can also provide replacement service, please contact ExacMe® customer service at the first time.

VIII RETURN/REPLACEMENT

- All pet vacuum dryers come with a 30-day free return/replace policy.
- During this time, we will provide pre-paid return label or arrange pick-up service for customers' convenience.

NOTE

Due to high shipping cost, please don't purchase return label by yourself for a defective pet vacuum dryer, it is recommended to contact ExacMe® Customer Service first.

IX EXACME CUSTOMER SUPPORT

If for any reason, we have fallen short of your expectations, or if you have any questions and suggestions, please refer to the following contact information, we will do our best to work with you to make sure you are entirely satisfied.

|                                                                                       |  |
|---------------------------------------------------------------------------------------|--|
|    |  |
|   |  |
|  |  |
|  |  |
|  |  |