

妙百丽

MagicBeryl

Mop Expert



Scan to watch the operation video.

This manual is applicable to M01, M03, M03L.

Precautions for operation

Applications: cleaning on hard floor, windows etc ... Please do not use this product abnormally.

Warning

Please read the contents carefully before using the product, so as to avoid the inconvenience in your life caused by incorrect operation of the product.

When in use, when the product is operated, please do not put your fingers into the top hook to avoid hurting your fingers.

When using the product, do not let children play near it, and pay special attention not to reach out, so as to avoid the danger of hand sticking.

When in use, when the product is operated, it is forbidden to insert other objects into the running cleaning bucket to avoid damage.

This product is a plastic product, so please don't put it in an open flame, hot, cold and other environments, otherwise it will lead to deformation, damage, burning, brittle cracking and other results that will reduce the performance of the product, and even destroy the product.

Warning

Before use, please make sure that the product is placed in a horizontal place for use.

Before use, please keep the center of gravity of the product unchanged, and make sure that the product is placed on the non-slip ground to avoid the product turning over when using.

Before use, please ensure that all parts of the mop are tightly joined, otherwise it may be out of hand control when used.

When cleaning or dewatering, please hold the handle vertically and put the mop tray vertically in the bucket for scrubbing or squeezing.

Do not let children use this product alone, and protect the children around you when using this product to avoid danger.


In order to avoid corrosion phenomena such as discoloration and deformation of some metals after a period of use, please pay attention to the following points:

- Don't be exposed to direct sunlight, high temperature and humidity for a long time.
- Do not adhere to detergents containing a lot of water and oil. It is recommended to use a neutral dry cloth to wipe the metal parts.
- Do not stick other labels containing corrosive substances on the surface.


If the product is damaged due to improper repair, self-modification or other man-made reasons, it belongs to the company's exemption clause.

After purchasing the product, please carefully check the relevant warranty certificates of the product parts and instructions; Waste such as packaging boxes should be handled by consumers themselves.

M01 Description of each component

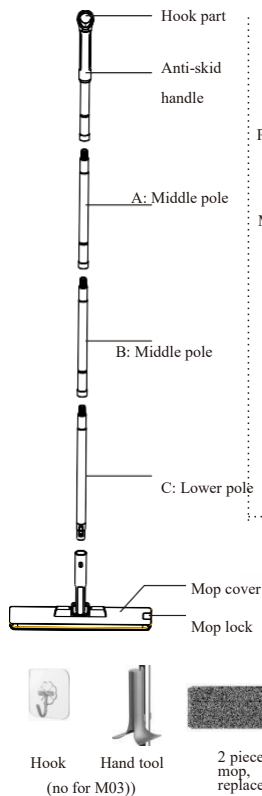

M03 Description of each component

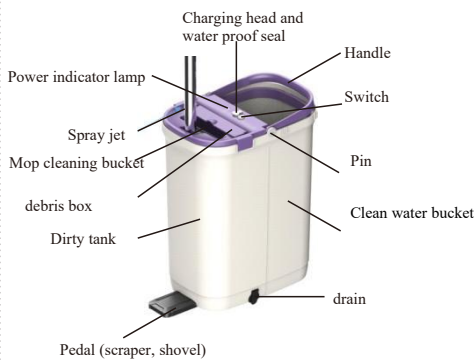


Charging line

Mop assembling instructions

Assembling steps between parts and components of mop rods


Joining steps between parts and components of mop rod

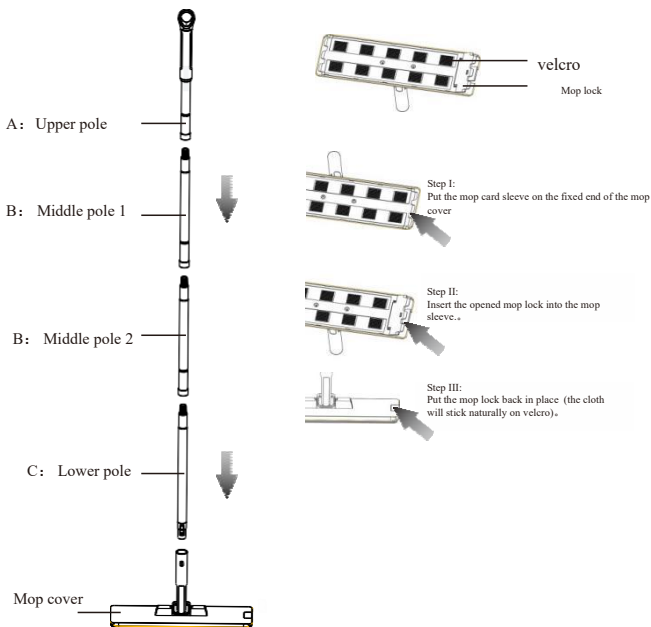


M03L Description: Basically same as M03, but without battery, pump, switch and charging indicator light. Equipped with a water ladle, which can pour water from the clean water bucket to the cleaning bucket.

M01 Instructions


1. Hand-free washing

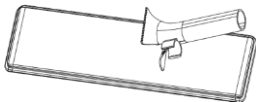

 
2. Scraper dries the mop, and there is almost no residual water on the ground.



3. Scraper sawtooth removes hair, melon shell, cotton wool, etc debris.

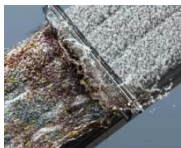

 4. Scraper to remove stuck stains



Storage hook

M03 instruction

Precautions for mop washing/drying

When there is water in the bucket, mop can be washed directly; If there is no water, press the switch to pump water into the cleaning bucket. (M03L can scoop water into the washing bucket with a water ladle)

Fill it with water once, and you can clean the mop with clean water for 12 times. No matter how big the house is, it's easy to get it done. Refuse to wash the mop with dirty water repeatedly, and the more times you wash it, the dirtier it will be.

Maximum water level line



Attention

When filling water into the clean water bucket, do not exceed the highest water level line; When cleaning, keep the pole upright and locked at 90.

Step 1: Preparation

First, fill the clean water bucket below the highest water level line; Press the switch to pump water into the washing bucket. Then, reverse any side of the mop cover by 90 degrees, parallel to the mop rod (after hearing the "click" sound, the mop cover can be fixed without shaking)



The pedal prevents the bucket from moving; After disassembly, it can be used as a shovel to remove stuck stains, dropped eggs, ice cream and so on.



Step 2: Brush.

Put the mop cover into the cleaning tank, and pull it up and down for about 10 times, so that the cleaning, dehydration, garbage separation, sewage discharge and other work of the mop can be completed at the same time. When the mop cover is inserted into the two-thirds position and pulled up and down several times, the mop will be drier. The frequency is different, and the humidity is controllable.



Open the drain, and the dirty water can be discharged directly.



The garbage in the garbage box can be dumped into the trash can.



The whole machine is detachable and easy to clean.



All accessories can be stored on the bucket hooks.



Built-in pump and lithium battery, one-button pumping. Charging port (matching local mobile phone charger, within 5 A 2 A)

Optional accessories (depending on whether the model is available or not)



Hook, can hang accessories.



A long steel wire brush can clean the sewage bucket.



ladle, can scoop water



Connector to wash reverse sides



Silicone scraper

Can be matched with optional parts

a. wash the inside and outside of the window



b. Scrub and scrape the ceramic tile wall surface



c. Wear-resistant silent silicone scraper, scraping the inside and outside of the window.



d. The silica gel scraper dries all hard floors, such as toilets, kitchens, balconies, etc., and dries instantly no slippery floors



e. Scraper and water scoop cooperate to remove water or wet garbage.



Maintenance instructions

✓Plastic material part

Cleaning the inside and outside of the barrel: please wipe the soft cloth with neutral cleaning agent, then rinse it with clear water and dry it in the shade.

It is forbidden to use steel wire balls when cleaning the inside and outside of the barrel to avoid damaging the plastic material.

Open flame heat source and some chemical liquids will cause deformation and discoloration of the barrel. Please stay away from these substances.

✓ Metal material part

Cleaning of metal mop rod: please wipe it with a slightly damp soft cloth and dry it in the shade.

Heavy acid and alkali, bleach, chemicals and pollutants will cause corrosion, discoloration and other damage to the barrel. Please stay away from these items.

✓Replace attachment part

After the flat mop is used, the dirt, hair and stains should be removed in time and dried.

It is forbidden to use dryer to dry flat mop, which may cause deformation of parts and burning of flat mop, and greatly reduce the dust adsorption capacity of flat mop.

✓Cleaning mop

After using for certain time the mop may be dirty. Put some water and detergent in the cleaning bucket and sock the mop for some time, pull the mop up and down to clean the mop. The mop can be brushed with some detergent & water, mop will be very clean.

Suggest to replace a new mop every 6 months.

Warranty statement

This product will be repaired free of charge within one year from the date of purchase if it is used normally according to the instructions. Consumable parts are not covered in the warranty period like the mop. In case of failure caused by abnormal use, the cost of accessories/labors shall be charged.