

Instruction Manual

High performance cordless handheld Vacuum
Cleaner



Model: VC236

Please read the manual carefully before operating your vacuum cleaner. We'll keep it for future reference.

This machine is only for picking up dry dust, it's strictly forbidden to pick up any liquid.

Overview of the appliance (with power brush)

1. Power Switch
2. Main Handle
3. Charging Socket
4. Speed button
5. Battery Status Indicator
6. Battery pack release button
7. Dust Filter Assembly
8. Dust Container(Cup)
9. Dust Container Bottom lid
10. Dust Release push Button
11. Extended Tube Release Button
12. Suction Inlet
13. Extended Tube
14. Power Floor Brush
15. Rotating Brush Release Button
16. Combined Crevice Nozzle
17. Wall mounted Charging station
18. Adapter

 


Overview of the appliance (with plastic brush)

1. Power Switch
2. Main Handle
3. Charging Socket
4. Speed button
5. Battery Status Indicator
6. Battery pack release button
7. Dust Filter Assembly
8. Dust Container(Cup)
9. Dust Container Bottom lid
10. Dust Release push Button
11. Suction Inlet
12. Extended Tube
13. Floor Brush
14. Combined Crevice Nozzle
15. Wall mounted Charging station
16. Adapter



Electronic display screen model

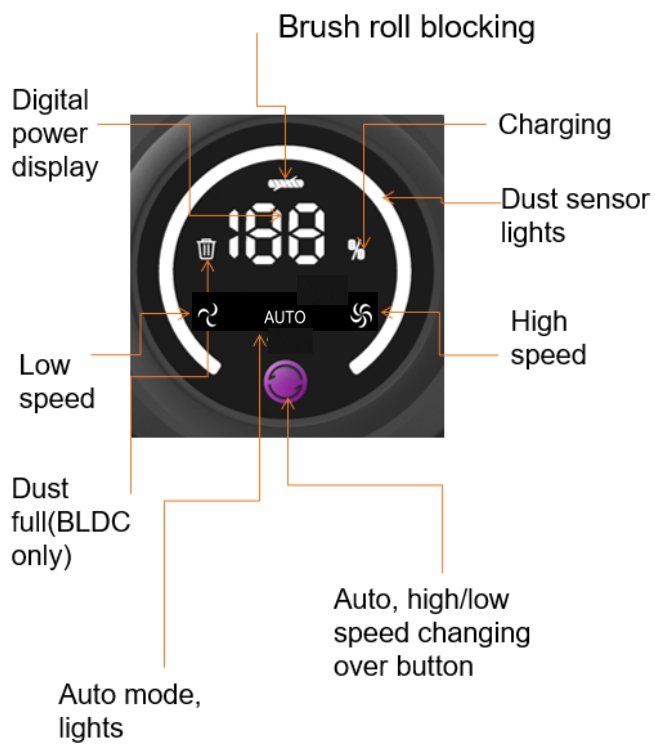


normal model



Speed control button
Battery status indicator

 Charging----wall mounted or on floor

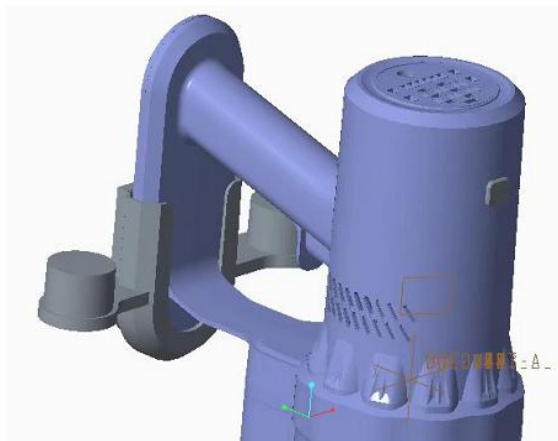

Important safety Instructions

To avoid potentially fatal electric shocks:

- Do not charge or use the appliance outdoors.
- Never use the hand vacuum cleaner if the cable, plug or casing are damaged.
- To avoid risks, arrange for damaged power cables and/or plugs to be replaced as soon as possible by a qualified specialist or by our Customer Services.
- Arrange for repairs to be carried out only by specialist workshops. Under no circumstances should you open the appliance yourself. Interference that are not carried out by a specialist workshop could lead to physical injuries.
- Before switching the hand vacuum cleaner on, ensure that the mains voltage corresponds to the voltage indicated in the technical data for the appliance.
- Never touch the power supply or the appliance with wet or damp hands.
- Do not use the adapter with an extension cable; connect the power adapter directly to a power socket.

To avoid the risk of injury:

- Do not change any accessories while the appliance is switched on.
- Do not use the hand vacuum cleaner for vacuuming up sharp objects or glass shards.
- Never vacuum up burning matches, glowing ashes or cigarette butts.
- Do not use the hand vacuum cleaner for vacuuming up chemical products, stone dust, gypsum, cement or similar particles.
- Do not use the hand vacuum for vacuuming up liquid, water or similar particles.
- This appliance is not suitable for use with inflammable and explosive substances or chemical and aggressive liquids.
- Always store the appliance indoors. To prevent accidents, keep the appliance in a dry location when not in use.
- Under extreme conditions, leaks in the battery cells may occur. In the event that battery fluid comes into contact with skin or eyes, the affected area must be rinsed off with water immediately. Contact a physician.
- **This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.**

Tips for safety:

- Use only accessory parts recommended by the manufacturer.
- The adapter may not be used for other purposes. Never carry the wall holder or the adapter by the cable. Do not pull on the cable when you want to move the appliance.
- Always grip the power plug to disconnect the appliance from the power supply.
- Always be sure to keep the hand vacuum away from heating elements, ovens or other heated appliances and surfaces.

- Always make certain that the ventilation slits are open. A blocked ventilation circuit can result in overheating and damage to the appliance.
- This product contains rechargeable batteries. Do not throw the batteries into a fire and do not subject them to high temperatures. There is the risk of an explosion!
- Take special care when using the hand vacuum on stairs.
- Do not use the hand vacuum without the dust filter inserted.
- Do not use the adapter for a different product and do not attempt to charge this appliance with a different charging station. Use only the charging station supplied with this appliance.
- Never try to recharge non-rechargeable batteries.

Operation Instructions

Assemble the unit

Note: Ensure that the handheld vacuum cleaner is not connected to the charger before assembling the extended tube.

1. take out of the handheld vacuum cleaner, extended tube and floor brush.
2. insert the extended tube into the suction inlet of handheld vacuum cleaner and you will hear the “click” when the extended tube is assembled rightly. Please make sure that the extended tube is inserted rightly before use the upright vacuum cleaner
3. Connect the floor brush with the extended tube. Please insert the extended tube into the floor brush and push the handheld vacuum cleaner toward the floor brush firmly.

Charging your vacuum cleaner

Note: The handheld vacuum cleaner and power floor brush will not work when it's charging with charger.

1. Place the unit or handheld vacuum cleaner near an electrical power outlet and plug in the charger.
2. Connect the charger to the charging socket. The battery status indicator lamp will dynamically shine to indicate that the vacuum cleaner is property connected to the charger and that the unit is being charged. When it's fully charged, all of the 3 lamps will turn off 10 hours after it's fully charged (for normal model) . If the model with electronic display screen, the % will flash during Charging and stop flashing when the power up to 100%. [For the 1st time, must charge full or discharge to 0%.](#)

Detach the handheld vacuum cleaner from the unit

Note: Ensure that the unit is not connected to the charger before detach the handheld vacuum cleaner.

1. To remove handheld vacuum cleaner from the unit, push the extended tube release button to pull out the extended tube from the handheld vacuum cleaner. Grasp the handle of handheld vacuum cleaner and pull out of the extended tube
2. You can use the handheld vacuum cleaner directly. If need to reassemble the unit, please refer the instructions in “assemble the unit”.

Use the handheld vacuum cleaner

Note: Please take out from the charger before use the vacuum cleaner. If the vacuum cleaner is in charging or low battery status, the vacuum cleaner and floor brush will not work.

1. The handheld vacuum cleaner can be used directly. The combined crevice nozzle can be used with the handheld vacuum cleaner directly. If you have the connection converter, it can be connected with your other suitable brushes.

2. Press the power switch to start the machine, it's the AUTO mode. Machine can adjust the suction power according to the dirty situation between min/max power automatically. Press the button on the battery pack to changing over: max power, min power, auto.

For normal model, push switch to start the machine and the button on the battery pack can change over max/min power.

Use the upright vacuum cleaner

Note: Please take out of the charger before use the vacuum cleaner. If the vacuum cleaner is charging or very low battery status, the vacuum cleaner and floor brush will not work.

1. To use the upright vacuum cleaner, ensure that the handheld vacuum cleaner is connected with the extended tube and floor brush rightly.

2. Press the power switch on main handle to start the machine to AUTO mode, and press the button on the battery pack to alternate between settings max power, min power, auto.

For normal model, push switch to start the machine and the button on the battery pack can change over max/min power.

3. Check if your model is with power brush and al. tube, if yes you can use as follows, whichever is convenient for you.



Empty and clean the dust container & dust filter

Note: To get the best performance, empty the dust container and clean the dust filter after 5 cleanings.

1. One push to empty dust.

2. Rotate the dust cup
To take off from unit

3. take out the HEPA to pat or
wash, dry naturally



4, Shake the filter kit bottom from side to side then push upward to take out the filtration kit, pat or Wash clean, can dry under sunlight.



After dry completely, put back in the machine. **Do not** use a washing machine to clean the dust filter assembly. Do not use a hair dryer to dry it. **Air dry only.**

NEVER operate vacuum cleaner without dust filter assembly in place.

5. Attach the dust container assembly to the handheld vacuum cleaner.

6. If you model is fitted with pet accessories, pls refer to pet accessories operation instructions.

CAUTION: The suction inlet must be open and free of any obstructions at all times. Otherwise, the motor may be overheat and could be damaged.


Check the machine air outlet to feel if the air goes out normally, in case almost no air goes out then the machine must be blocked, must check the power brush/brush hose/aluminum tube/ Main unit's dust cup and the cyclone system, cup filter as well as the exhaust filter, remove the blockage, or wash any clogging until the air goes out normally.

Note: it is recommended that the filter should be cleaned or replaced, and the cyclone system Should be cleaned every three(3) to six(6) months depending on usage to ensure best performance of the vacuum cleaner. The power brush rolling bar should be checked from time to Time, and the hair etc should be cleaned in time.

In case of wrong operation, such as the power brush rolling bar is blocked by hair etc, or the main Vacuum motor inlet is jammed, or the battery is too hot, etc, the system may be protected, use the charger to activate it. In case the problem still exists, present it to a qualified agent for repair Or maintenance.



Push the button
To open the brush

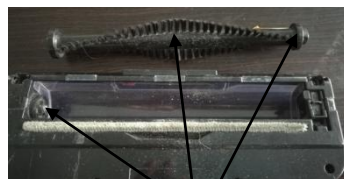

take out the beating bar
to remove any hair etc
blockage. If there is any hair
At the axis also remove it



can be opened
with a driver to
remove any hair



Check no blockage
In the inlet



check the tube no blockage

TROUBLE SHOOTING GUIDE		
PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
handheld vacuum cleaner does not work	1. batteries discharged. 2. dead battery(battery won't hold charge). 3. connector between the unit and the charger are dirty. 4. no power in electrical outlet supplying transformer. 5. charger is plugged in. 6. System is protected.	1. charge unit. 2. call customer service or dispose of unit. 3. wipe and clean dirt from connector. 4. check fuse or breaker, replace fuse/reset breaker. 5. unplug charger. 6. activate the system with the charger.
Power floor brush does not work	1. the rolling brush is blocked with debris or string etc. 2. the belt is broken. 3. handheld vacuum cleaner is not connected correctly.	1. remove debris from rolling brush. If there is string or thread wrapped cut gently with scissors. 2. call customer service 3. connect the handheld vacuum cleaner correctly.
handheld vacuum cleaner cannot pick-up dust; suction power become weak	1. dust container is full. 2. Dust filter needs cleaning or replacement. 3. unit needs recharging.	1. empty dust container 2. remove dust filter assembly and check for object(s) in suction inlet and remove. Clean or replace dust filter assembly. 3. charge unit.
Dust leak from handheld vacuum cleaner	1. dust container is full. 2. dust filter is not installed correctly. 3. puncture/hole in dust filter	1. empty dust container 2. Review the dust filter assembly installation instructions. 3. replace dust filter assembly.
Battery can not be charged	battery has reached the end of its service life.	Call customer service
Hear strange noise when the appliance work	check whether the floor brush and dust filter is blocked by big dust; check whether dust container is full.	stop to use the appliance right now; clean the dust filter assembly and floor brush, empty the dust container. If the problem cannot disappear, pls call customer service

Important

Make sure that dust filter has completely air dried before replace back In the handheld vacuum cleaner. In case of long time storage, 6 months longer, the machine should be charged for one time to avoid battery slight leaking to below start voltage.

Warning

Please remove the adaptor/battery pack from the unit before cleaning it.

Never picking up water etc liquid, or use water to wash any parts.

For BLDC motor model when dust full machine will stop automatically, empty the dust to recover the machine.

Brush will stop when it's blocked, clear any blocking to recover the machine.

WARNING:

Correct Disposal of this product	
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe.